

TPM-4100/TP-4100

Touch Panel Monitor

User Manual



➤ **Warranty**

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, beginning from the date of delivery to the original purchaser.

➤ **Warning**

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

➤ **Copyright**

Copyright © 2012 by ICP DAS Co., Ltd. All rights are reserved.

➤ **Trademarks**

Names are used for identification purposes only and may be registered trademarks of their respective companies.

Contact us

If you encounter any problems, please feel free to contact us.

You can rely on ICPDAS for a prompt quick response.

Email: service@icpdas.com

Table of Contents

Table Of Contents

Industrial Communication Products

Table of Contents 3

1. Introduction 5

1.1. Features.....	7
1.2. Specifications.....	8
1.3. Dimension.....	9
1.4. I/O interfaces.....	13
1.5. Companion CD	14
1.6. System Setup.....	15
1.6.1. System Configuration	15
1.6.2. Panel Mounting.....	18

2. Touch Driver Setup 20

2.1. Windows CE 5.0	21
2.1.1. USB Touch Driver.....	22
2.1.1.1. Installation for WinPAC-8000 and WinPAC-5000	23
2.1.1.2. Configuration for WinPAC-8000 and WinPAC-5000	24
2.1.1.3. Uninstalling the WinPAC-8000 and WinPAC-5000	26
2.1.1.4. Other Windows CE5.0 Devices ...	27
2.1.2. Serial Touch Driver.....	28
2.1.2.1. Installation for WinPAC-8000 and WinPAC-5000	29
2.1.2.2. Configuration for WinPAC-8000 and WinPAC-5000	31
2.1.2.3. Uninstalling the WinPAC-8000 and WinPAC-5000	33
2.1.2.4. Other Windows CE5.0 Devices ...	34
2.2. Windows CE 6.0	35
2.2.1. USB Touch Driver.....	36
2.2.1.1. Installation for XP-8000-CE6.....	37
2.2.1.2. Configuration for XP-8000-CE6...	39

Table Of Contents

Industrial Communication Products

2.2.1.3. Uninstalling the XP-8000-CE6.....	41
2.2.1.4. Other Windows CE6.0 Devices ...	43
2.2.2. Serial Touch Driver	44
2.2.2.1. Installation for XP-8000-CE6.....	45
2.2.2.2. Configuration for XP-8000-CE6...	48
2.2.2.3. Uninstalling the XP-8000-CE6.....	50
2.2.2.4. Other Windows CE 6.0 Device	52
2.3. Windows XP Embedded	53
2.3.1. Universal Driver	53
2.3.1.1. Installation for XP-8000	54
2.3.1.2. Configuration for XP-8000.....	59
2.3.1.3. Uninstall for XP-8000	63
2.3.1.4. Other Windows XP Embedded Devices	65
2.4. Windows XP/7.....	66
2.4.1. Universal Driver	66
2.4.1.1. Installation	67
2.4.1.2. Configuring.....	71
2.4.1.3. Uninstall	73



1. Introduction

This chapter provides an overview of the TPM-4100/TP-4100 and its components.

The TPM-4100/TP-4100 Panel Mount Monitor includes a standard 10.4" TFT LCD screen with a rugged aluminum front bezel that support 800 x 600 resolution and a -25 ~ 75°C operating temperature range. The TPM-4100/TP-4100 is also guaranteed to integrate with ICP DAS PAC control systems, such as WP-8000 series and the XP-8000 series.

Package List

The shipping package includes the following items:

- 1 10.4" TFT LCD Monitor
- 1 VGA cable
- 1 RS-232 cable
- 1 USB cable
- 4 Mounting clamps
- 4 Mounting Screws
- 1 Power supply
- 1 Companion CD containing software drivers and digital versions of the user manuals

1.1. Features

- 10.4" LCD Monitor supports a 800 x 600 resolution
- Full-function OSD control keys for optimizing the display
- Driver Support for Windows 2K/XP/Vista/7/XP-Embedded/WinCE 5.0/6.0
- Wide operating temperature range of -25 ~ +75° C
- Aluminum front bezel design that is ideal for rugged applications
- LED backlight technology
- Supports the IP65 standard for protection against dust and water

1.2. Specifications



The table below is a summary of the specifications of the TPM-4100/TP-4100, and lists the accessories that are supported by the TPM-4100/TP-4100.


Specifications

Model	TPM-4100		TP-4100
Display			
Size	10.4"		
Resolution	800 x 600		
Max. colors	16.7 M		
Brightness (cd/m2)	320		
Contrast ratio	500:1		
Viewing angle (H/V)	140/130		
Backlight life (hrs)	50,000		
Touch panel	4-wire	5-wire	
	Analog resistive, RS-232 or USB1.1 (Type B) interface		
Input signal	VGA (analog RGB)		
MMI (Man Machine Interface)			
OSD control	Functions: Brightness, Contrast, Phase, Horizontal Position, Vertical Position		
Power switch	Yes		
LED indicators	Power, Display signal is detected		
Power			
Input range	+12 ~ 48 VDC		
Power consumption	8.5 W		
Mechanical			
Material	Aluminum	Plastic	
Dimensions (W x L x H)	293 mm x 231 mm x 53 mm	290 mm x 228 mm x 53 mm	
Installation	Panel Mounting	Panel Mounting, VESA (75 x 75) Mounting	
Ingress protection	Front panel: IP65		
Environmental			
Operating temperature	-25 ~ +75°C		
Storage temperature	-30 ~ +80°C		
Ambient relative humidity	10 ~ 90% RH (non-condensing)		



1.3. Dimension


TPM-4100 (Unit: mm)

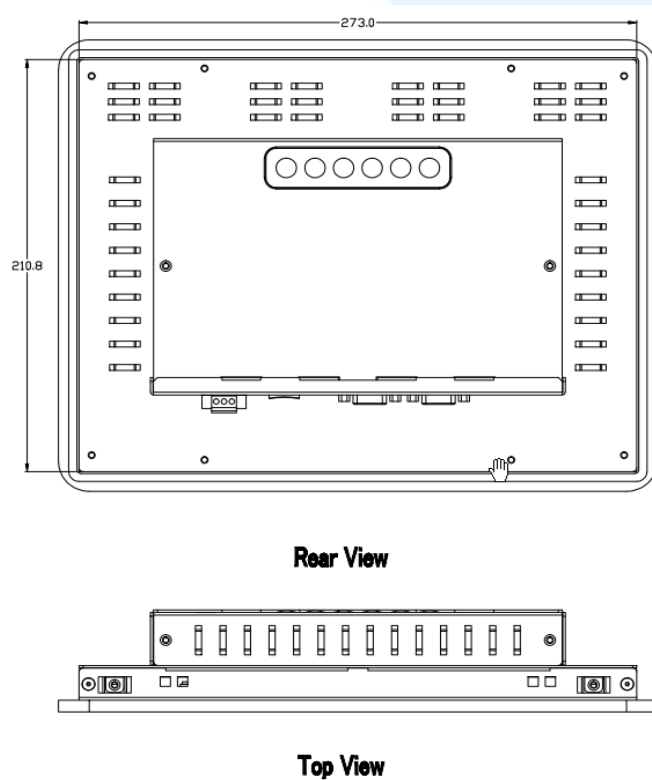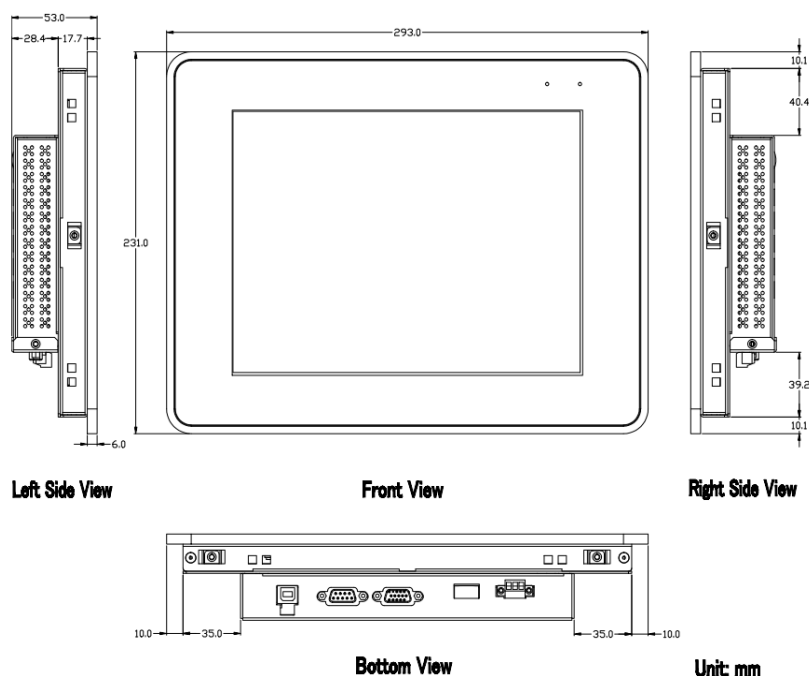

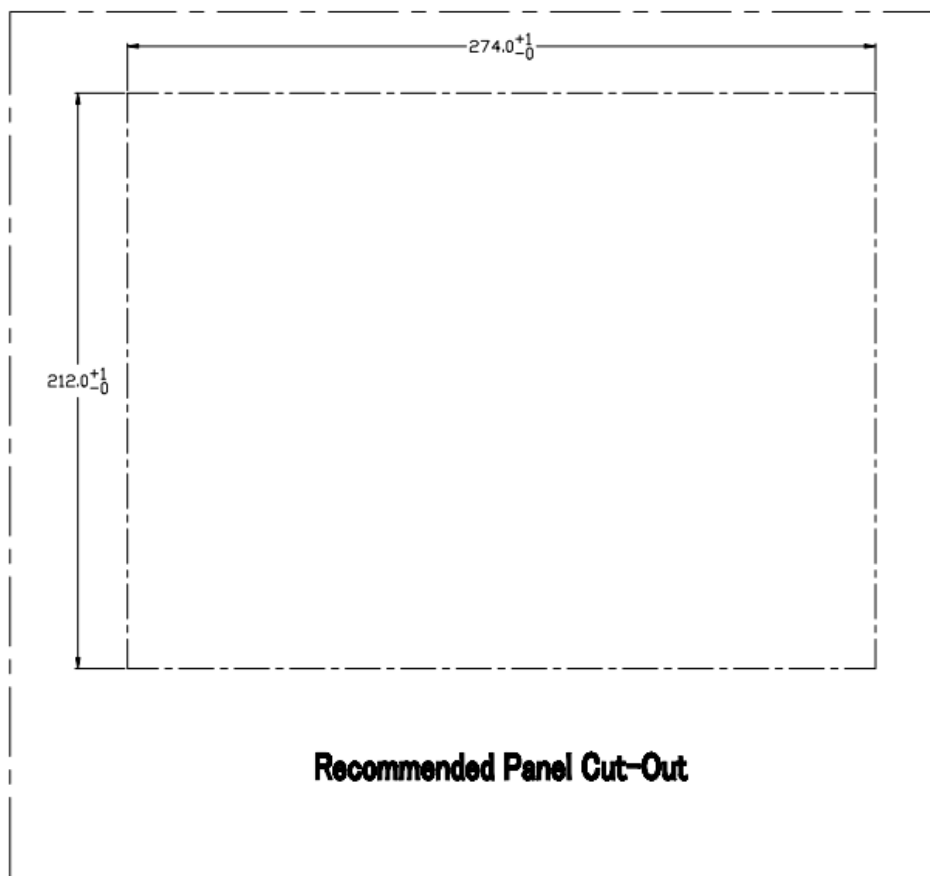


TP-4100 (Unit: mm)

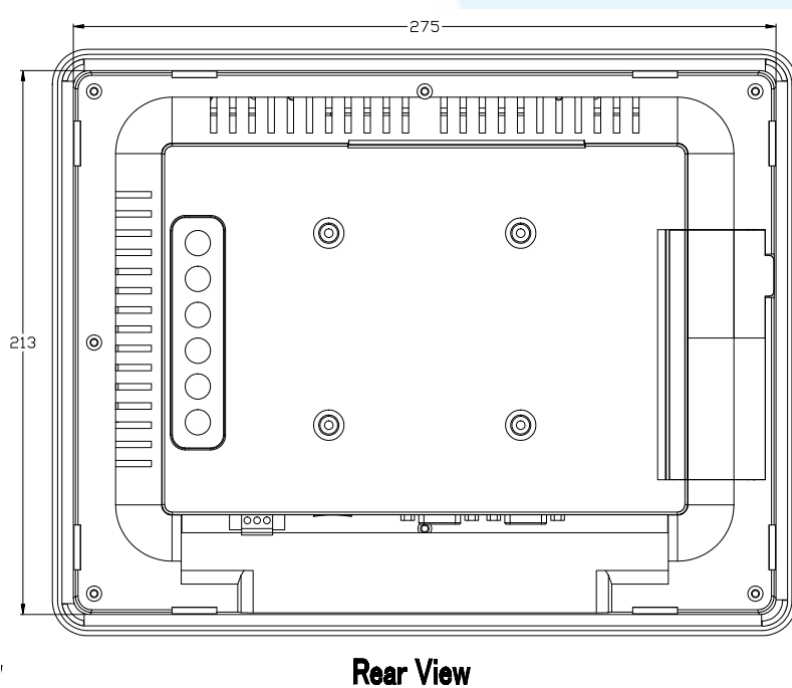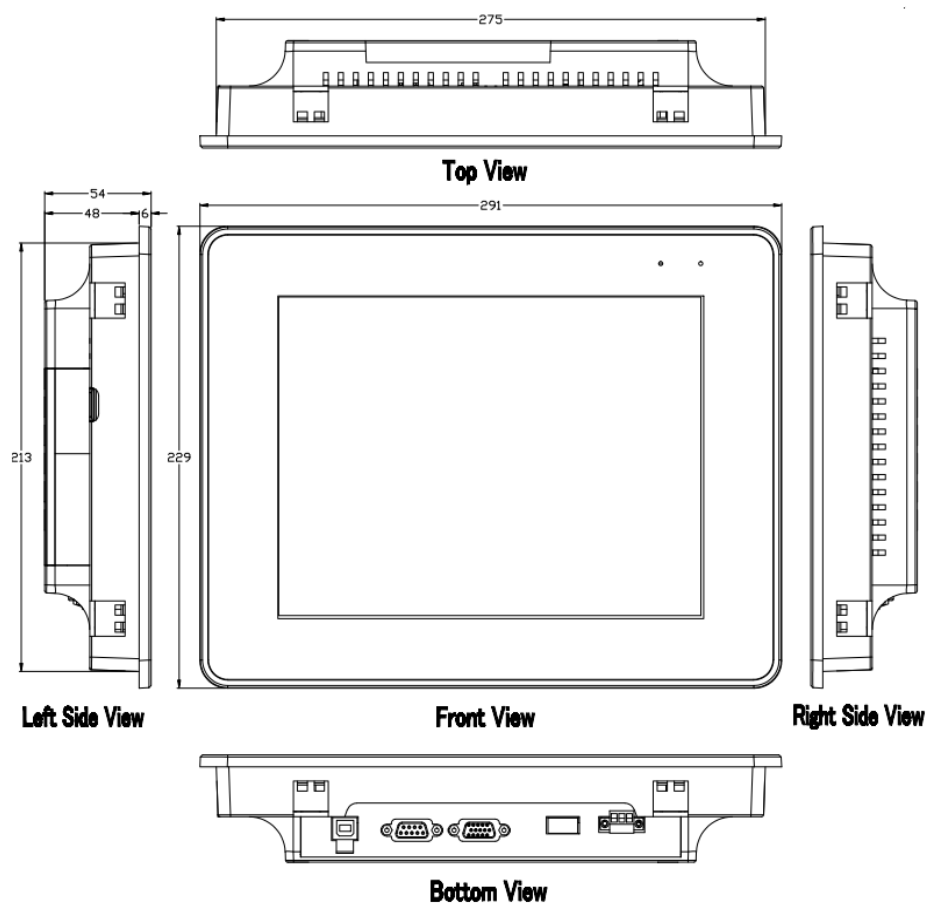

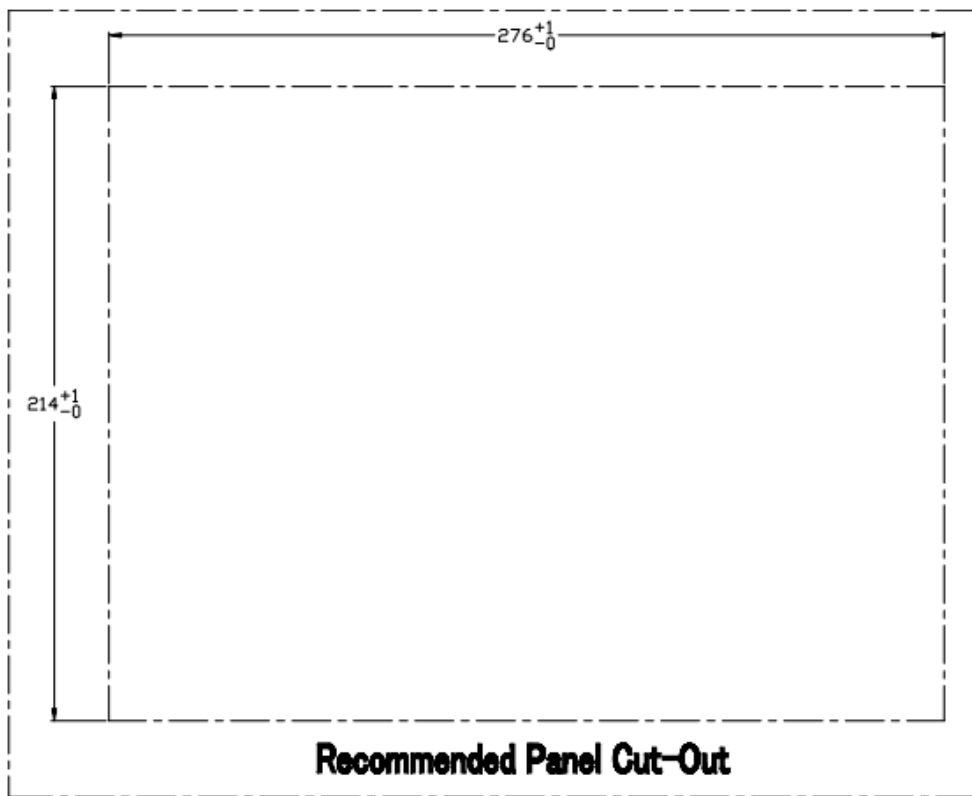


1.4. I/O interfaces

TPM-4100

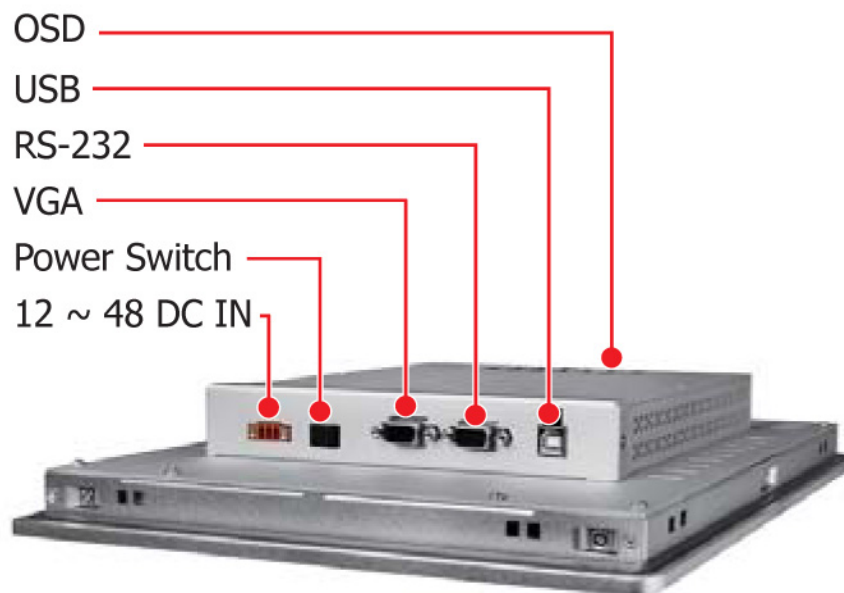


TP-4100

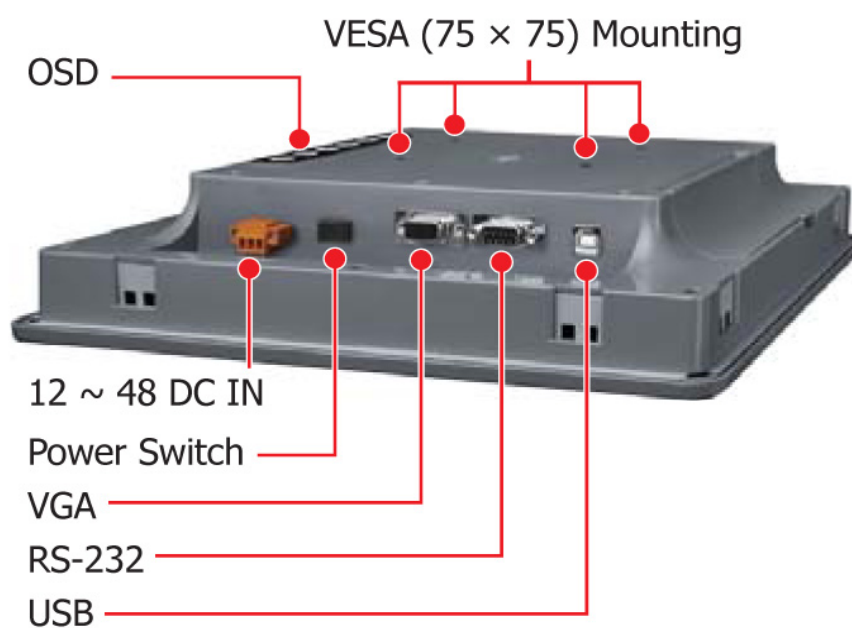

1.5. Companion CD

This package includes a companion CD that contains a collection of documentation and device drivers. An outline of the folder structure is illustrated below.

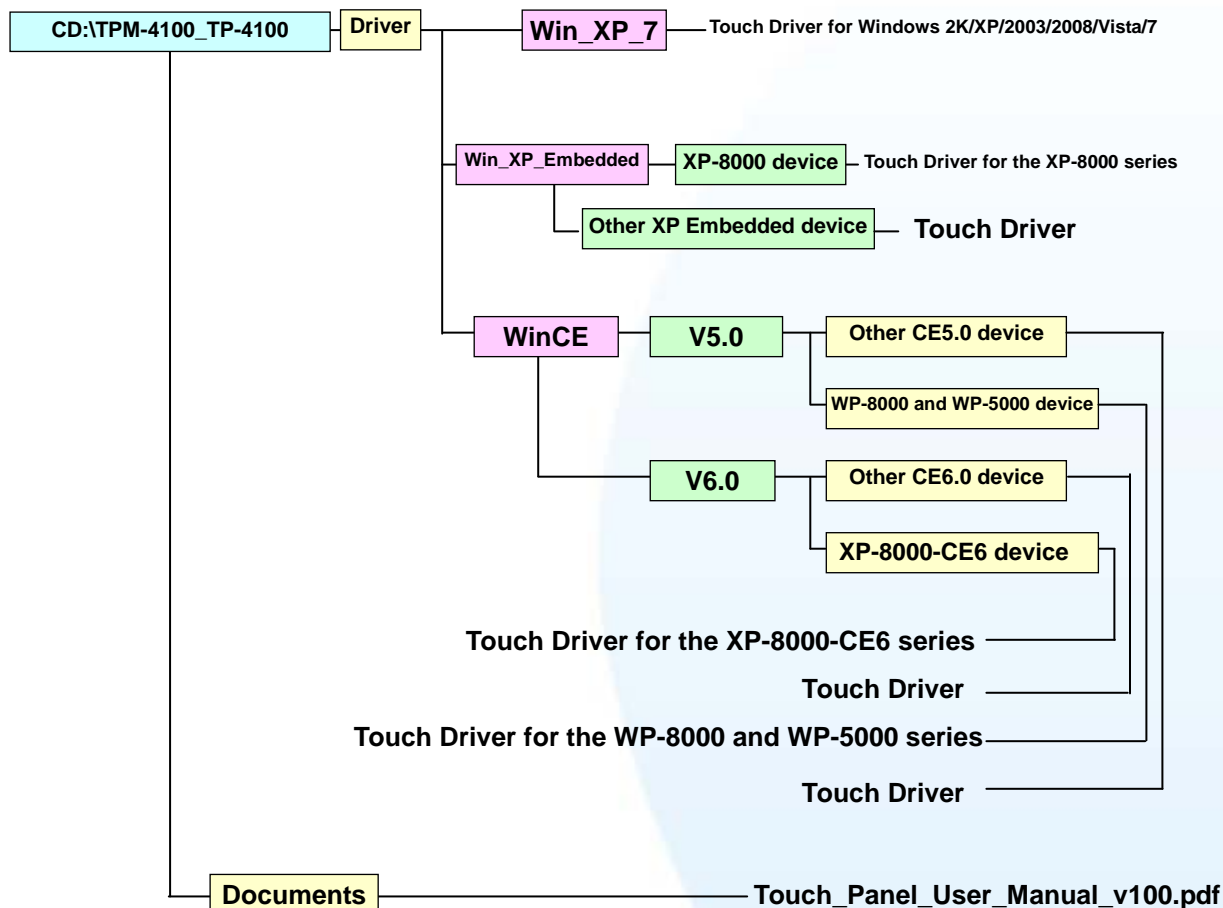






1.6. System Setup

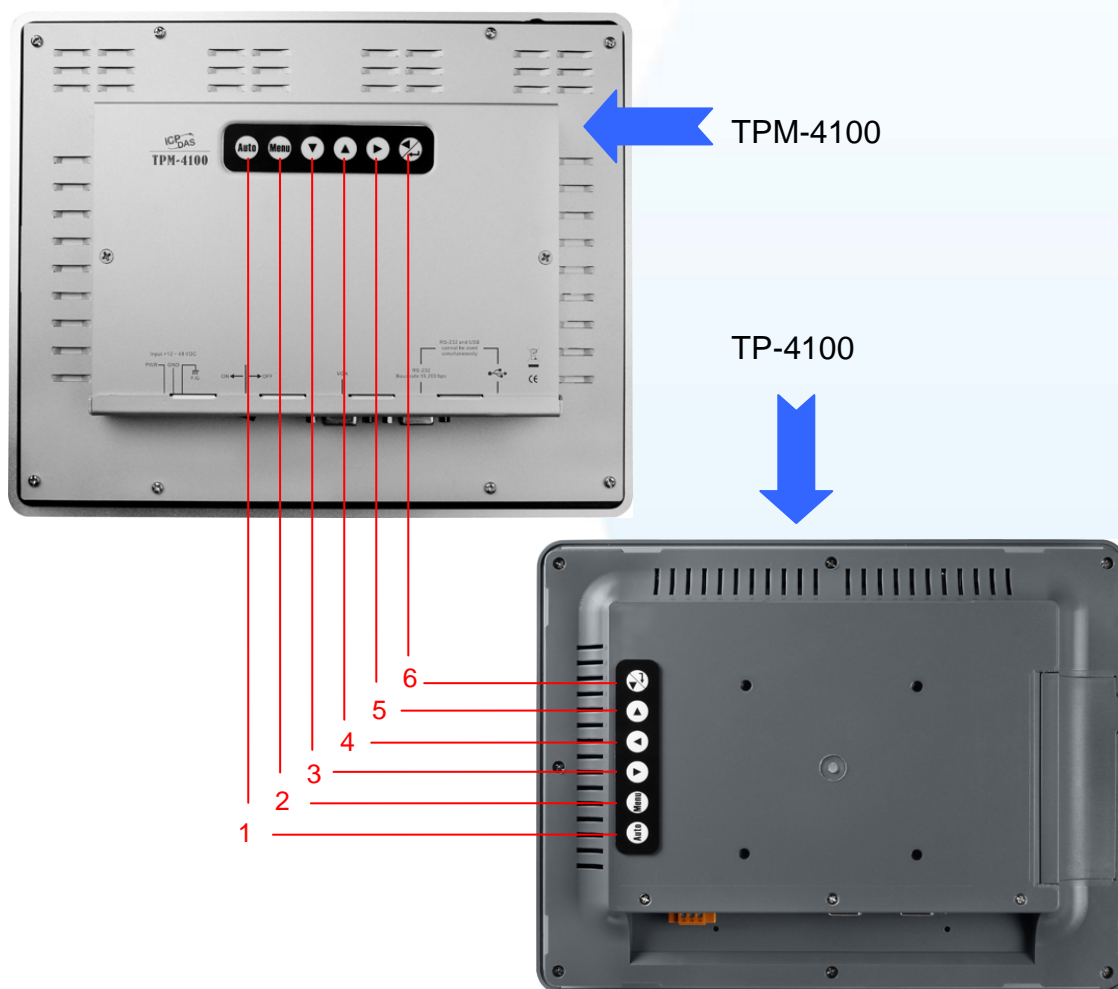

This section gives details regarding system configuration and adjustment and mounting options.

1.6.1. System Configuration


Front Panel Controls



Control	Function
1 	Adjust V-Position, H-Position, Clock and Clock and Clock-Phase
2 	Turns OSD main menu on or off
3 	Selects adjustment item
4 	Selects adjustment item counter-clockwise

- 5  Decreases the value of the adjustment item
- 6  1. Increases the value of the adjustment item
2. Enter the adjustment item

OSD Menu Functions

Control	Description	
Contrast	Adjusts the contrast of the monitor	
Brightness	Adjusts the brightness of the monitor	
Image setting	Auto config	Press  to adjust automatically
	Phase	Increase or decrease phase value.
	Clock	Increase or decrease pixel clock value
	H-position	Move the screen left or right
	V-position	Moves the screen up or down
Color setting	NATIVE	Color temperature
	9300K	Color temperature
	6500K	Color temperature
	USER	Making adjustments to the R/G/B content.
OSD setting	Language	Support 8 languages.
	OSD.H	Move the OSD position horizontally on the screen. When the ▲ button is pressed, the OSD control menu will move to the right side of the screen. Likewise, when the ▼ button is pressed, the OSD control menu will move to the left side.
	OSD.V	Move the OSD position vertically on the screen. When the ▲ button is pressed, the OSD control menu will move to the top side of the screen. Likewise, when the ▼ button is pressed, the OSD control menu will move to the lower side.

Data and Power LED

The Data LED and Power LED are situated in the top right-hand corner.



Data LED: When the LED is green, it indicates that there is no display signal.


Power LED: When the LED is red, it indicates that the power is on. When the LED is not illuminated, it indicates that either the power is off, or the power supply is not connected.

Display Modes


The following display modes are supported.

Resolution	Horiz. Sync.	Vert. Sync.
640 x 480	31.4 KHz	50 Hz
	31.4 KHz	59.9 Hz
	37.5 KHz	75 Hz
720 x 400	31.4 KHz	70 Hz
800 x 600	35.1 KHz	56.2 Hz
	37.8 KHz	60.3 Hz
	46.9 KHz	75 Hz
1024 x 768	48.3 KHz	60 Hz
	56.4 KHz	70 Hz
	60.0 KHz	75 Hz

1.6.2. Panel Mounting

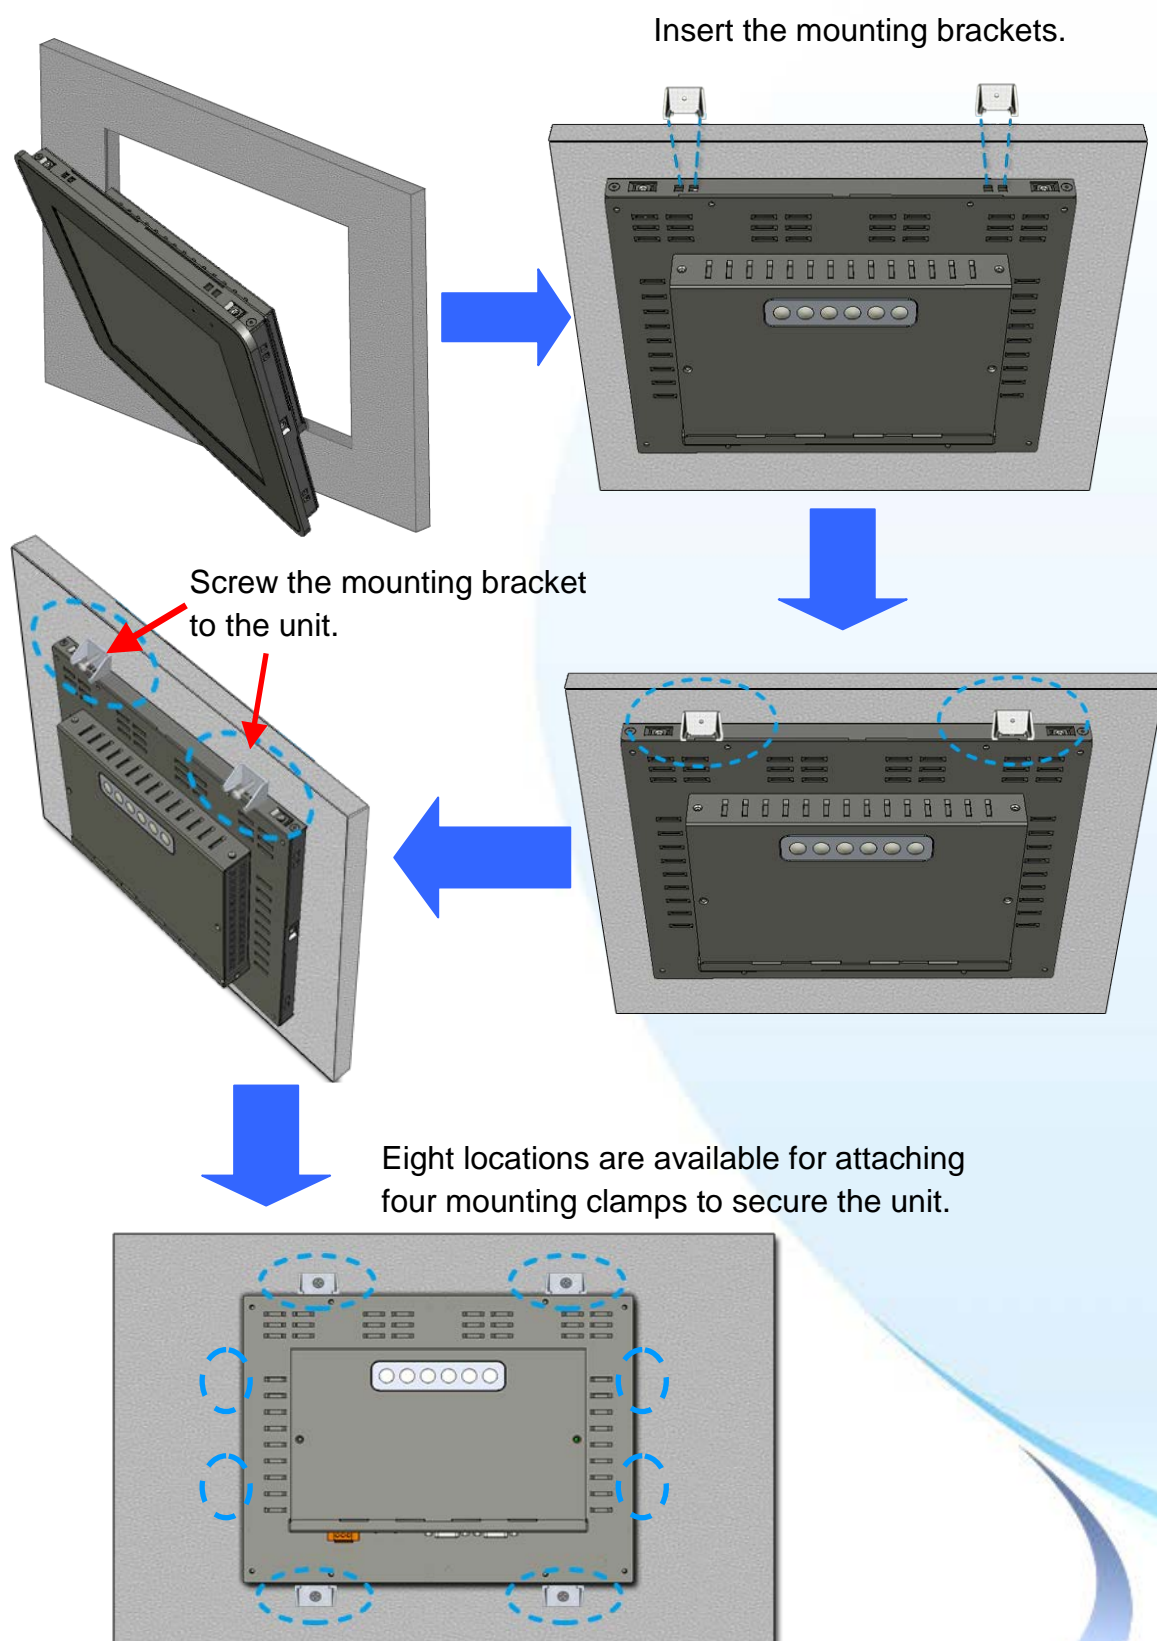

Panel thickness up to 6 mm.

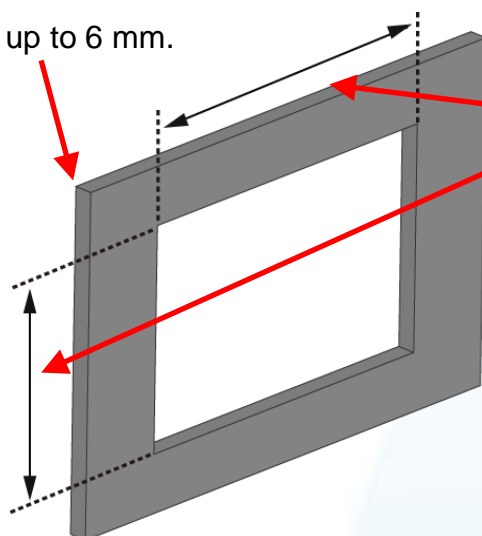

Refer to Sec.1.3 for default information regarding the dimensions of the panel.



2. Touch Driver Setup

This chapter provides a overview that describes the steps required for installing, uninstalling, and configuring the touch driver.



2.1. Windows CE 5.0

This section describes how to install, calibrate and uninstall the touch driver for the WP-8000 series and WP-5000 series, and gives details of how to obtain drivers for other CE5 devices.

2.1.1. USB Touch Driver

Two USB touch drivers are available. The first is for WP-8000 series modules and WP-5000 series modules of ICPDAS PAC controllers, and the second is for other Windows CE5.0 systems.

WP-8000 series:

WP-8131/WP-8431/WP-8831, WP-8141/WP-8441/WP-8841

WP-8137/WP-8437/WP-8837, WP-8147/WP-8447/WP-8847

WP-8139/WP-8431/WP-8839, WP-8141/WP-8441/WP-8849

WP-8136/WP-8431/WP-8836, WP-8141/WP-8441/WP-8846

WP-5000 series:

WP-5141/WP-5441-OD/WP-5149/WP-5449-OD/WP-5147/WP-5447-OD/

WP-5146/WP-5446-OD

2.1.1.1. Installation for WinPAC-8000 and WinPAC-5000

The following procedure describes how to install the PenMount USB touch driver.


1. Copy the driver from the CD-ROM to the WinPAC.

The “PenMount_USB_TOUCH_Vyyyymmdd.CAB” driver file can be obtained from:


CD:\TPM-4100_TP-4100\Driver\WinCE\V5.0\WP-8000 and WP-5000 device\

Or go to the “\System_Disk\External_device_driver\” folder on the WinPAC.


2. Double-click the “PenMount_USB_TOUCH_Vyyyymmdd.CAB” file.

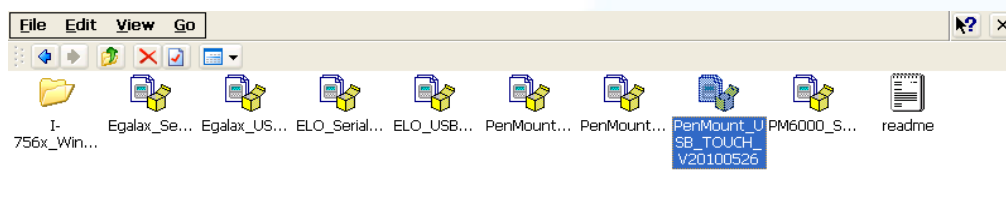

3. Show one of two dialogs below. Just click the “OK” button to continue installation.

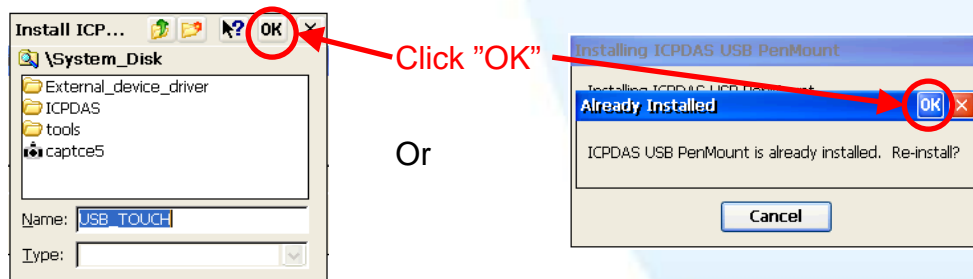


4. From the “Start” menu, click “Programs”→Open the “WinPAC Utility”, and then click the “Save and Reboot” option from the “File” menu.

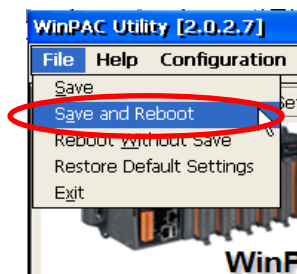

2.1.1.2. Configuration for WinPAC-8000 and WinPAC-5000

Calibration


1. From the “Start” menu, click “Programs”→”USB_TOUCH”→”PenMount”→”Calibration”.

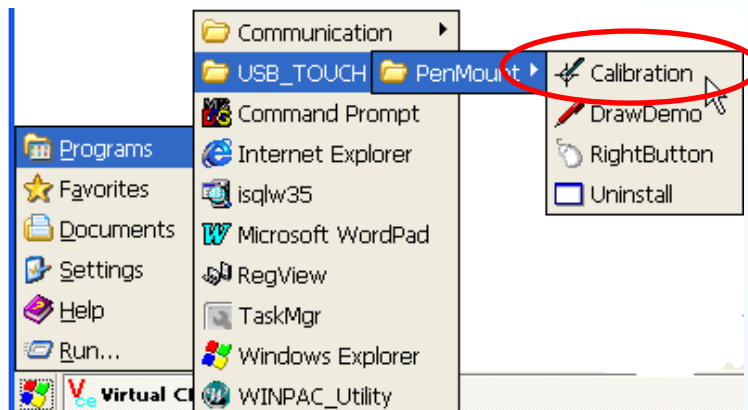

2. Follow the instructions on the screen to begin calibration.




3. Once calibration has been completed, from the “Start” menu, click ”Programs”→Open the “WinPAC Utility”, and then click the “Save and Reboot” option from the “File” menu.

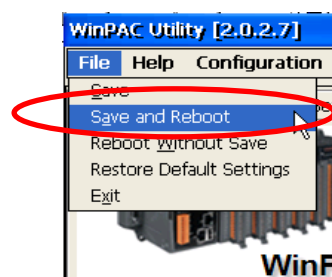

Simulating the Right Mouse Button


1. From the Start menu, click “Programs”→”USB_TOUCH”
→”PenMount”→”RightButton”.

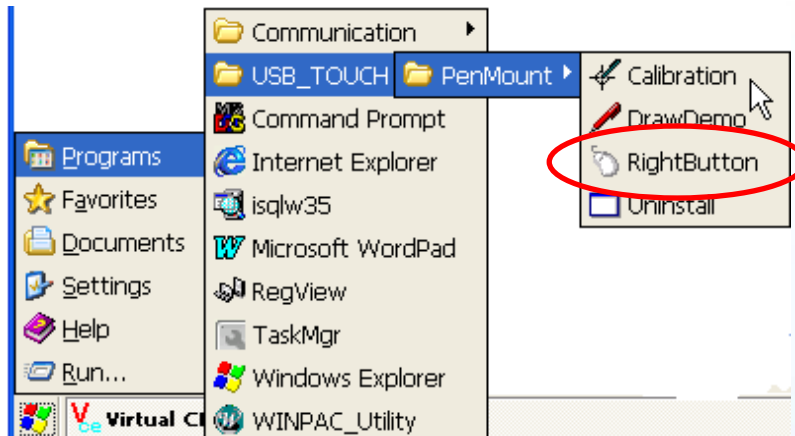

2. Show a screen below (Left picture)→ Click the “mouse” → Turn into right picture.



3. **Click any object:** Click “My device” to test if the function of “RightButton” works. If the screen below shows, the function of “RightButton” works.

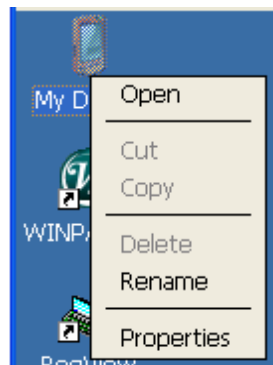


4. The operation of the right mouse button can be simulated by repeating Step 2 and Step 3 for any object.


2.1.1.3. Uninstalling the WinPAC-8000 and WinPAC-5000

The following procedure describes how to uninstall the PenMount USB touch driver.


1. From the “Start” menu, click “Programs”→”USB_TOUCH”
→”PenMount”→”Uninstall”.

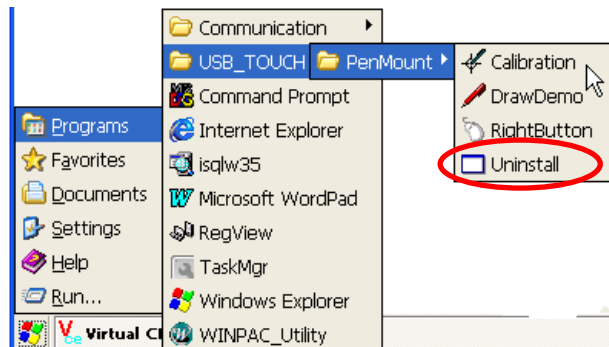

2. A warning pop-up will be displayed asking you to confirm the uninstall request. Click the “Yes” button to uninstall the driver.

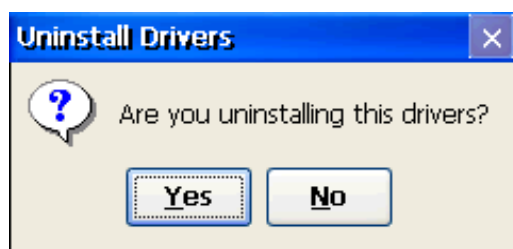

3. Once the uninstallation process is complete, a dialog will displayed requesting that you reboot the system. Click the “Yes” button to reboot the WinPAC immediately, or click “NO” if you intend to reboot at a later time.

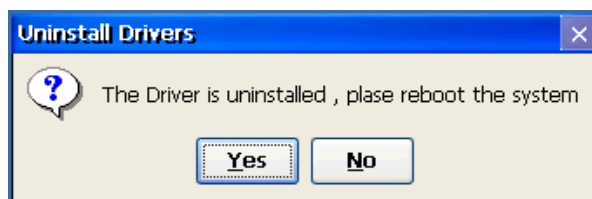

2.1.1.4. Other Windows CE5.0 Devices

The driver for use with other windows CE5.0 devices can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V5.0\Other CE5.0 device\

or go to the PenMount website to download the latest driver:

http://www.penmount.com/down_2_1.php

2.1.2. Serial Touch Driver

Two serial touch drivers are available. The first is for WP-8000 series modules and WP-5000 series modules of ICPDAS PAC controllers, and the second is for other Windows CE5.0 systems.

WP-8000 series:

WP-8131/WP-8431/WP-8831, WP-8141/WP-8441/WP-8841

WP-8137/WP-8437/WP-8837, WP-8147/WP-8447/WP-8847

WP-8139/WP-8431/WP-8839, WP-8141/WP-8441/WP-8849

WP-8136/WP-8431/WP-8836, WP-8141/WP-8441/WP-8846

WP-5000 series:

WP-5141/WP-5441-OD/WP-5149/WP-5449-OD/WP-5147/WP-5447-OD/

WP-5146/WP-5446-OD

2.1.2.1. Installation for WinPAC-8000 and WinPAC-5000

The following procedure describes how to install the PenMount serial touch driver. Note that **the default COM port for serial touch driver is COM4**.

There is a **RS-232 cable in the shipping package** (Sec.1). The user can directly use this cable to **connect TPM-4100/TP-4100 with COM4 of WinPAC-8000 to use serial touch driver to do a touch operation by serial way**. If the user wants to use other com port, please note the position of TX and RX of COM port. About the pin assignment, please refer to the user manual of the WinPAC-8000




1. Copy the driver from the CD-ROM to the WinPAC.
The "PM6000_Serial_TOUCH_Vyyyymmdd.CAB" driver file can be obtained from:


CD:\TPM-4100_TP-4100\Driver\WinCE\V5.0\WP-8000 and WP-5000 device\

Or go to the “\System_Disk\External_device_driver\” folder on the WinPAC.


2. Double-click the “PM6000_Serial_TOUCH_Vyyyymmdd.CAB” file.

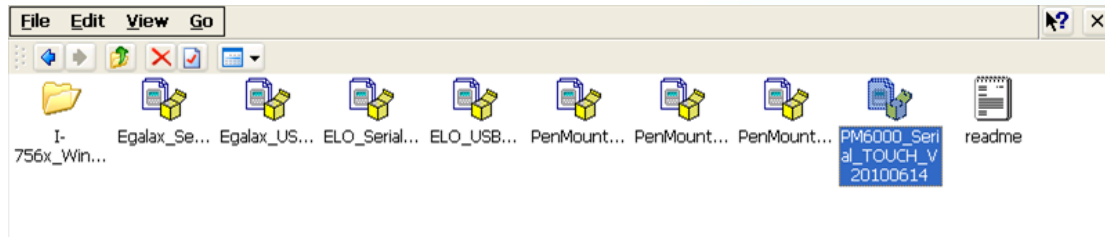

3. Show one of two dialogs below. Just click “OK” button to continue installation.

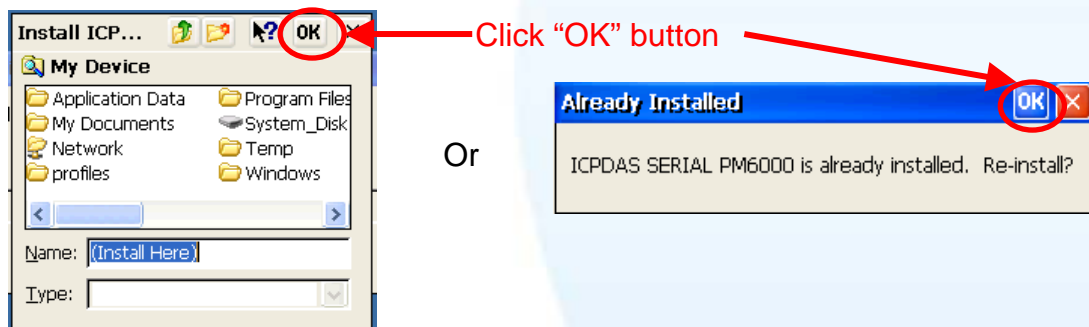


4. From the “Start” menu, click ”Programs”→Open the “WinPAC Utility”, and then click the “Save and Reboot” option from the “File” menu.

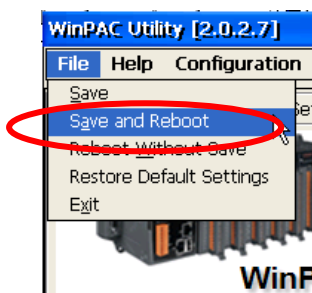


2.1.2.2. Configuration for WinPAC-8000 and WinPAC-5000

Calibration


1. From the “Start” menu, click “Programs”→”Serial_TOUCH”
→”PenMount”→”Calibration”.

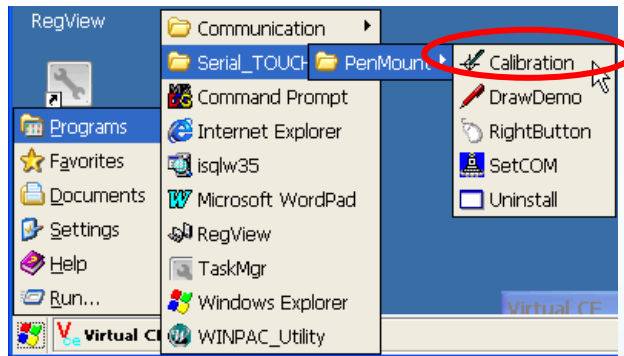

2. Follow the instruction on the screen to begin calibration.

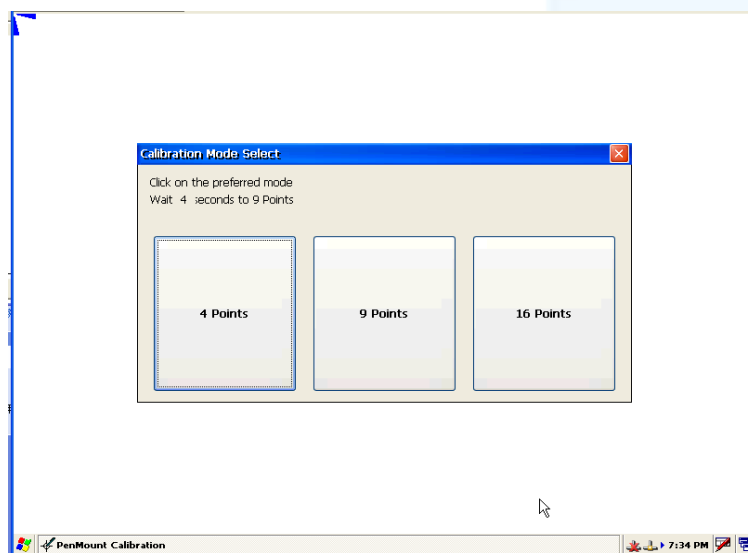


3. Once calibration has been completed, from the “Start” menu, click ”Programs”→Open the “WinPAC Utility”, and then click the “Save and Reboot” option from the “File” menu.

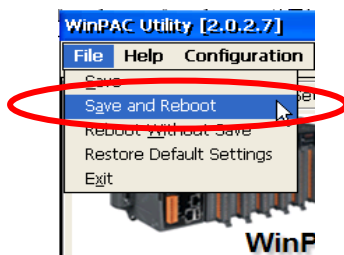


Changing the COM Port


1. From the “Start” menu, click “Programs”→”Serial_TOUCH”→”PenMount”→”SetCOM”.

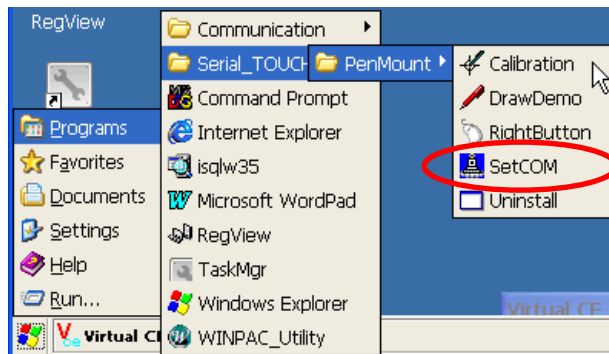

2. In the pop-up dialog, select the COM Port you wish to use as default and click the “Set” button to save the changes.

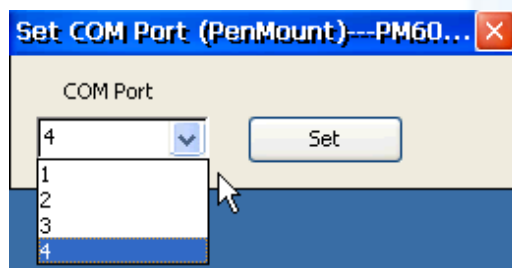

3. From the “Start” menu, click ”Programs”→Open the “WinPAC Utility”, and then click the “Save and Reboot” option from the “File” menu.

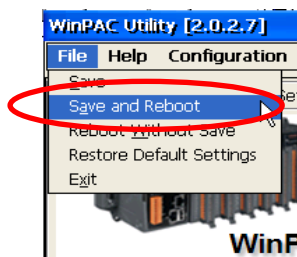

4. Disconnect the cable from the current COM Port and reconnect it to the specified COM Port.


Simulating the Right Mouse Button

For details of how to configure right mouse button simulation, please refer to the process describes in “Simulating the Right Mouse Button” in [Sec.2.1.1.2](#)


2.1.2.3. Uninstalling the WinPAC-8000 and WinPAC-5000

The following procedure describes how to uninstall the PenMount serial touch driver.


1. From the “Start” menu, click “Programs”→”Serial_TOUCH”
→”PenMount”→”Uninstall”

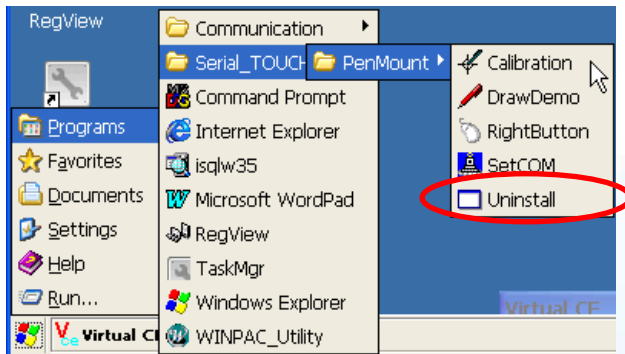

2. A warning pop-up will be displayed asking you to confirm the uninstall request. Click the “Yes” button to uninstall the driver.

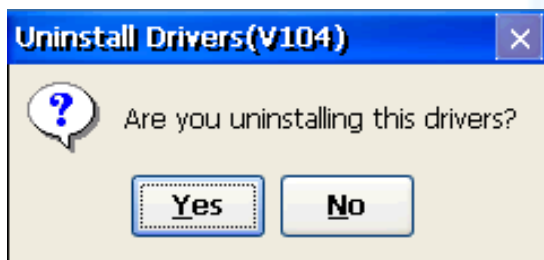

3. Once the uninstallation process is complete, a dialog will displayed requesting that you reboot the system. Click the “Yes” button to reboot the WinPAC immediately, or click “NO” if you intend to reboot at a later time.

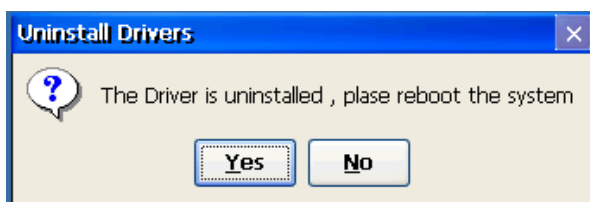

2.1.2.4. Other Windows CE5.0 Devices

The driver can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V5.0\Other CE5.0 device\

or go to PenMount website to download the latest driver:

http://www.penmount.com/down_2_1.php



2.2. Windows CE 6.0

This section describes how to install, calibrate and uninstall the touch driver for the XP-8000-CE6 series, and gives details of how to obtain drivers for other CE6 devices.

2.2.1. USB Touch Driver

Two USB touch drivers are available. The first is for XP-8000-CE6 series modules of ICPDAS PAC controllers and, and the second is for other Windows CE6.0 systems.

XP-8000-CE6 series:

1. Using the ATOM CPU:

XP-8141-Atom-CE6/XP-8341-Atom-CE6/XP-8741-Atom-CE6

XP-8147-Atom-CE6/XP-8347-Atom-CE6/XP-8747-Atom-CE6

XP-8149-Atom-CE6/XP-8349-Atom-CE6/XP-8749-Atom-CE6

2. Using the LX800 CPU:

XP-8041-CE6/XP-8341-CE6/XP-8741-CE6

XP-8047-CE6/XP-8347-CE6/XP-8747-CE6

XP-8049-CE6/XP-8349-CE6/XP-8749-CE6

XP-8046-CE6/XP-8346-CE6/XP-8746-CE6

2.2.1.1. Installation for XP-8000-CE6

The following procedure describes how to install the PenMount USB touch driver.

1. Copy the driver from the CD-ROM to the XP-8000-CE6.

The “PenMount_USB_TOUCH_Vxx_yyyymmdd_XPAC_CE6.CAB” driver file can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V6.0\XP-8000-CE6 device\

Or go to the “\System_Disk\External_device_driver” folder on the XP-8000-CE6.

2. Double-click the

“PenMount_USB_TOUCH_Vxx_yyyymmdd_XPAC_CE6.CAB” file.

Tips & Warnings




The driver (*.cab) file can only be used once. If you attempt to use it to install driver a second time, a warning dialog with a message similar to “<FileName> **is not a valid Windows CE Setup file**” will be displayed advising that the setup has failed. Please re-download a new (*.cab) file to use.




3. Depending on the type of CPU, one of two dialog windows will be displayed. Click the “OK” button to continue with the installation.

Using the ATOM CPU

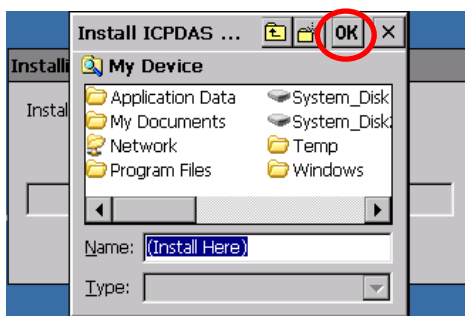


Or

Using the LX800 CPU

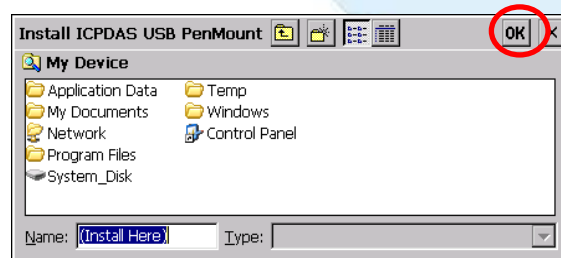


4. Once the installation has been completed, a dialog will be displayed advising that the system needs to be rebooted. Click the “OK” button to reboot the XP-8000-CE6.

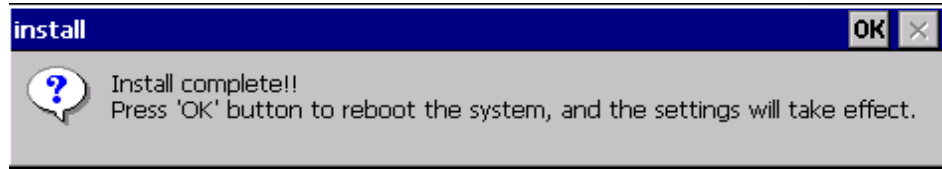


2.2.1.2. Configuration for XP-8000-CE6

Calibration

1. From the "Start" menu, click "Programs" → "USB_TOUCH" → "PenMount" → "Calibration".

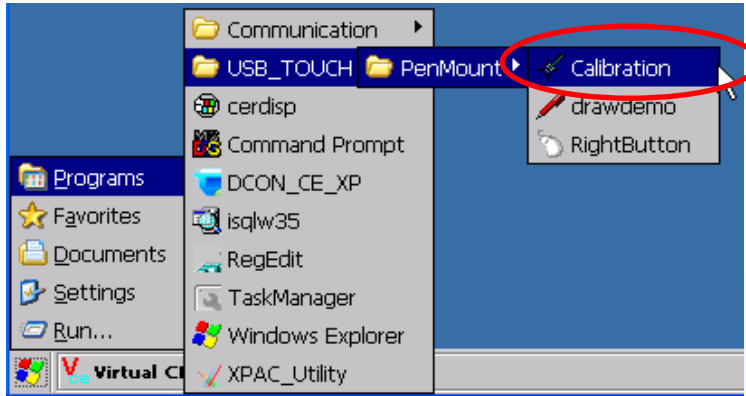

2. Following the instructions on the screen to begin calibration.

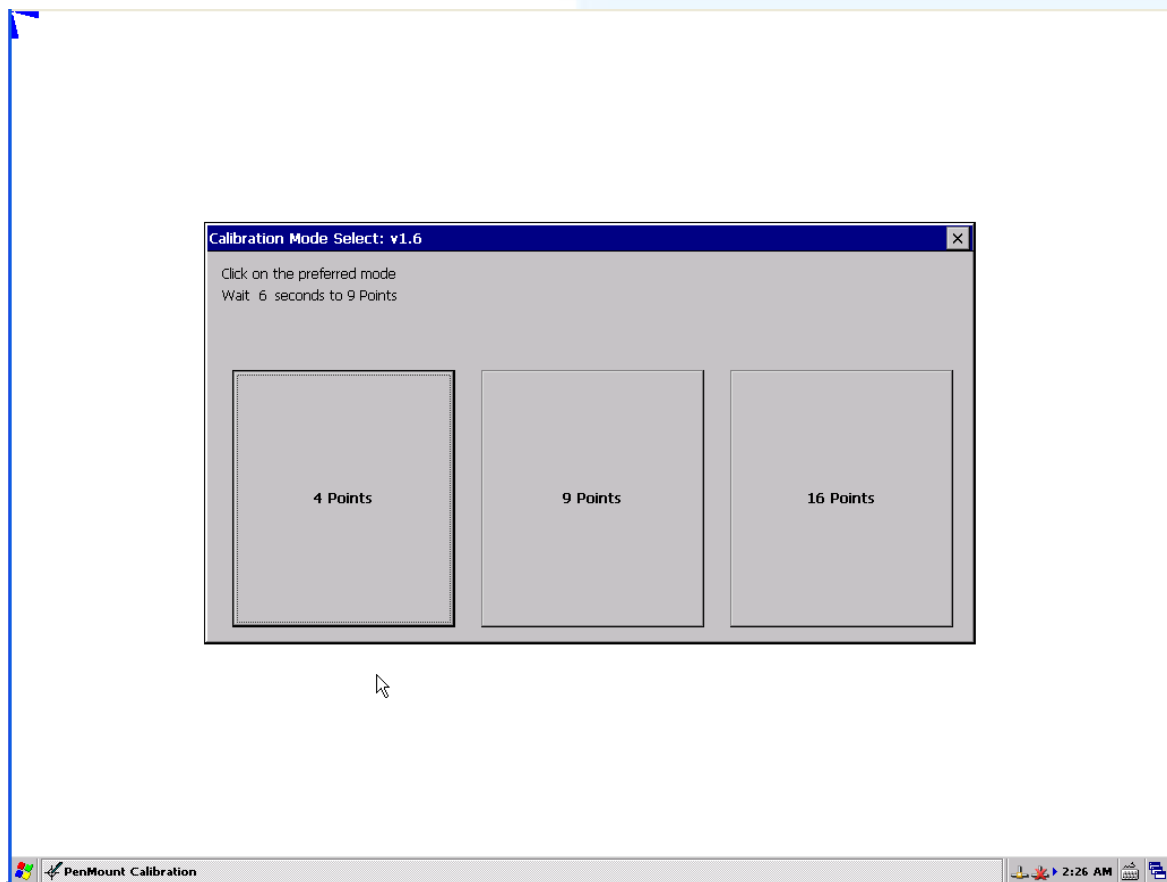


Simulating the Right Mouse Button

For details of how to simulate right mouse button functions, please refer to the process described in “Simulating the Right Mouse Button” in [Sec. 2.1.1.2](#)


2.2.1.3. Uninstalling the XP-8000-CE6

The following procedure describes how to uninstall the PenMount USB touch driver.


1. From the “Start” menu, click “Settings”→”Control Panel”.

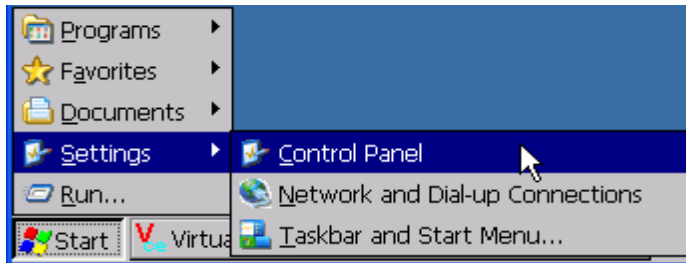

2. Double click the “Remove Programs” icon and select “ICPDAS USB PenMount” from the “Programs” panel in the “Remove Programs” dialog box and then click the “Remove” button. When the warning pop-up, click “Yes” button to permanently uninstall the driver.

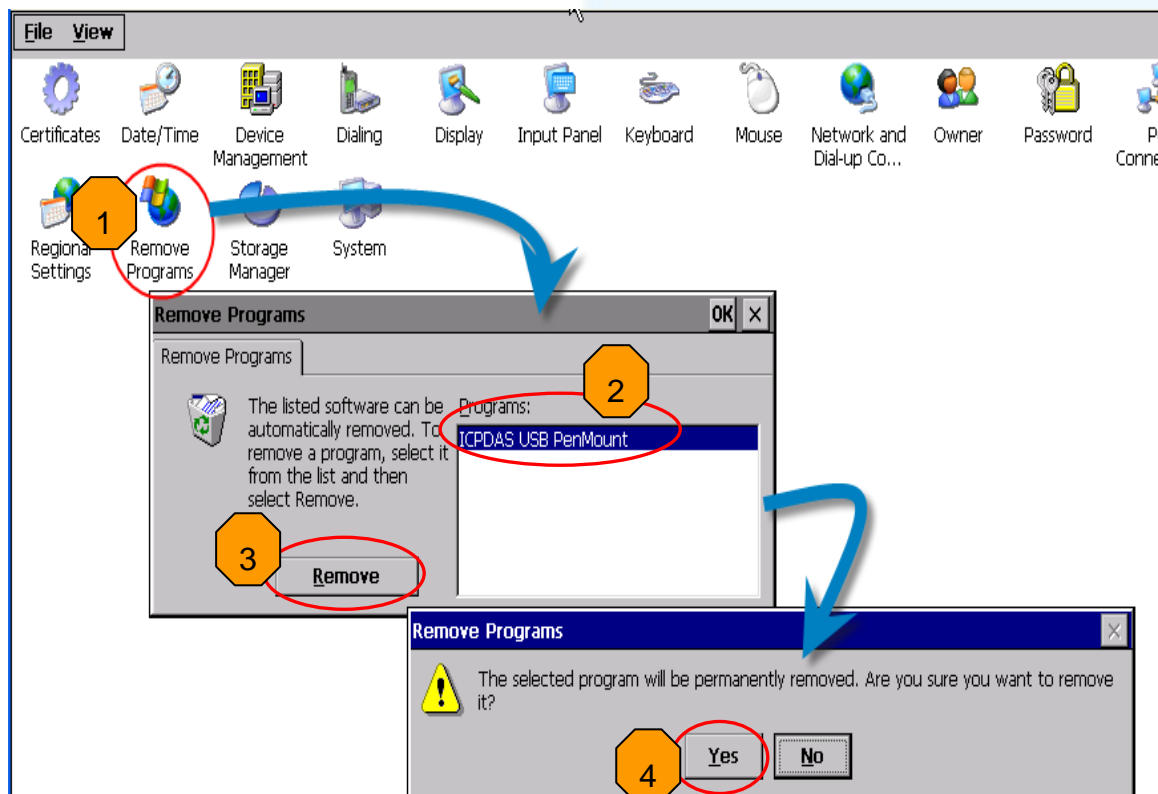

3. Once the uninstallation process is complete, a dialog will be displayed requesting that you reboot the system. Click the “Yes” button to reboot immediately or click the “No” button if you intend to reboot at a later time.

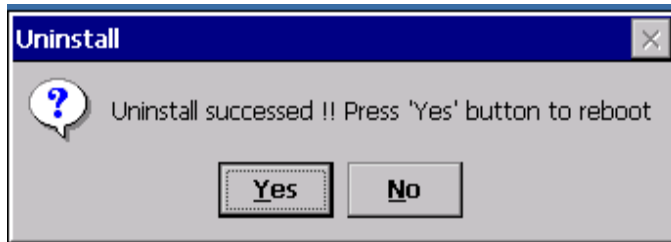

2.2.1.4. Other Windows CE6.0 Devices

The driver can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V6.0\Other CE6.0 device\

or go to the PenMount website to download the latest driver:

http://www.penmount.com/down_2_1.php

2.2.2. Serial Touch Driver

Two serial touch drivers are available. The first is for XP-8000-CE6 series modules of ICPDAS PAC controllers and the second is for other Windows CE6.0 systems.

XP-8000-CE6 series:

1.Using ATOM CPU

XP-8141-Atom-CE6/XP-8341-Atom-CE6/XP-8741-Atom-CE6

XP-8147-Atom-CE6/XP-8347-Atom-CE6/XP-8747-Atom-CE6

XP-8149-Atom-CE6/XP-8349-Atom-CE6/XP-8749-Atom-CE6

2.Using LX800 CPU

XP-8041-CE6/XP-8341-CE6/XP-8741-CE6

XP-8047-CE6/XP-8347-CE6/XP-8747-CE6

XP-8049-CE6/XP-8349-CE6/XP-8749-CE6

XP-8046-CE6/XP-8346-CE6/XP-8746-CE6

2.2.2.1. Installation for XP-8000-CE6

The following procedure describes how to install the PenMount Serial touch driver.

Note that the default COM Port for the touch driver is COM5.

There is a **RS-232 cable in the shipping package** (Sec.1). The user can directly use this cable to **connect TPM-4100/TP-4100 with COM5 of XP-8000-CE6 to use serial touch driver to do a touch operation by serial way**. If the user wants to use other com port, please note the position of TX and RX of COM port. About the pin assignment, please refer to the user manual of the XP-8000-CE6



1. Copy the driver from the CD-ROM to the XP-8000-CE6 device.

The "PenMount_Serial_TOUCH_Vxx_yyyymmdd_XPAC_CE6(PM6000R).CAB" file can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V6.0\XP-8000-CE6 device\

Or go to the "\System_Disk\External_device_driver" folder on the XP-8000-CE6.


2. Double click the

"PenMount_Serial_TOUCH_Vxx_yyyymmdd_XPAC_CE6(PM6000R).CAB" file.

Tips & Warnings




The driver (*.cab) file can only be used once. If you attempt to use it to install driver a second time, a warning dialog with a message similar to "<filename>**is not a valid Windows CE Setup file**" will be displayed advising that the setting has failed. Please re-download a new (*.cab) file to use.

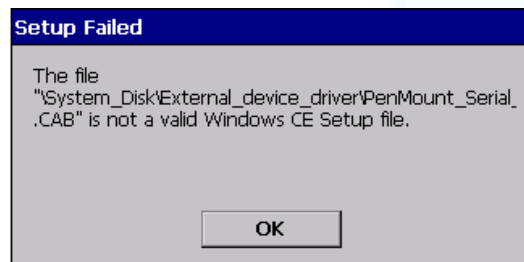


3. Depending on the type of CPU, one of two dialog windows will be displayed.

If the controller use the ATOM CPU, the following will be displayed.

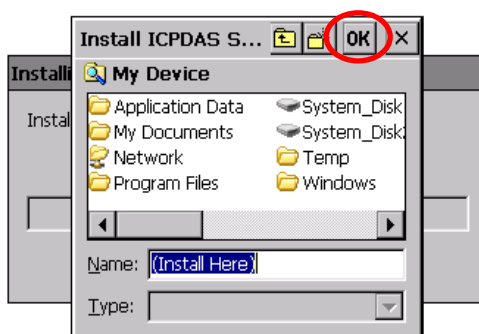


Or

Alternatively, if the controller use the LX800 CPU, the following will be displayed.

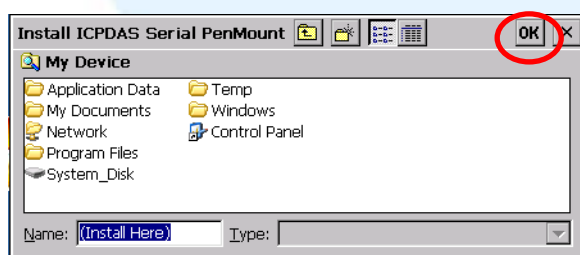

Click the "OK" button to continue with the installation.


4. Once the installation has been completed, a dialog will be displayed advising that the system needs to be rebooted. Click the “OK” button to reboot the XP-8000-CE6.

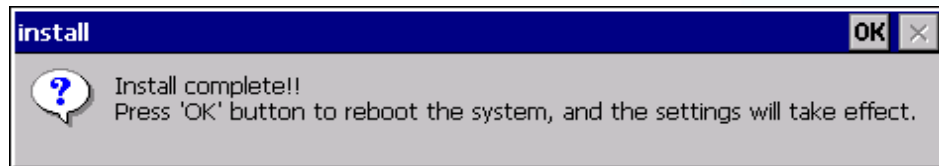

2.2.2.2. Configuration for XP-8000-CE6

Calibration

1. From the "Start" menu, click "Programs" → "Serial_TOUCH" → "PenMount" → "Calibration"

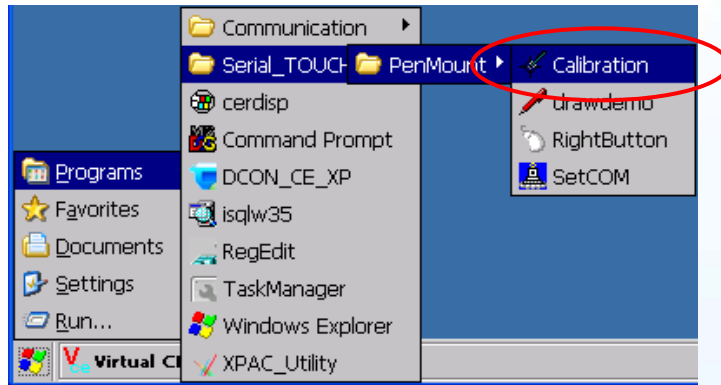


2. Follow the instruction on the screen to begin calibration. You will be presented with one of two screens depending on the CPU you are using.



If you are using the LX800 CPU, the screen will look like this.




If you are using the ATOM CPU, the screen will look like this.

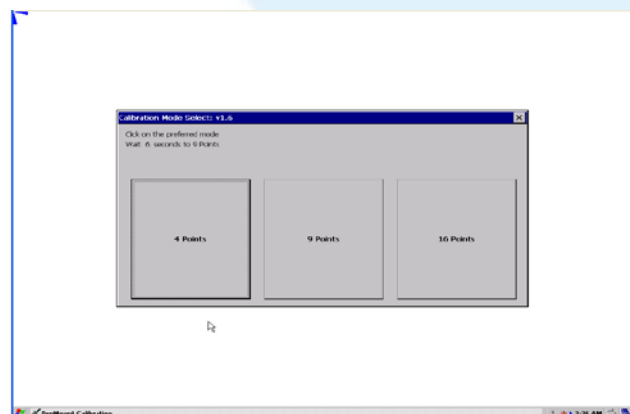


Change the COM Port

1. From the “Start” menu, click “Programs”→”Serial_TOUCH”
→”PenMount”→”SetCOM”.

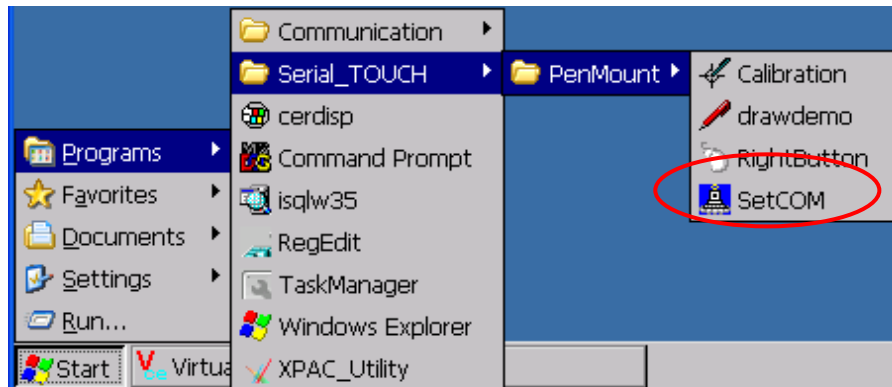

2. Just choose the COM port→Click “Set” button→Click “Yes” button to reboot the system. The baudrate for TPM-4100/TP-4100 touch monitor is 19200 bps, so please don't modify the baudrate of touch driver.

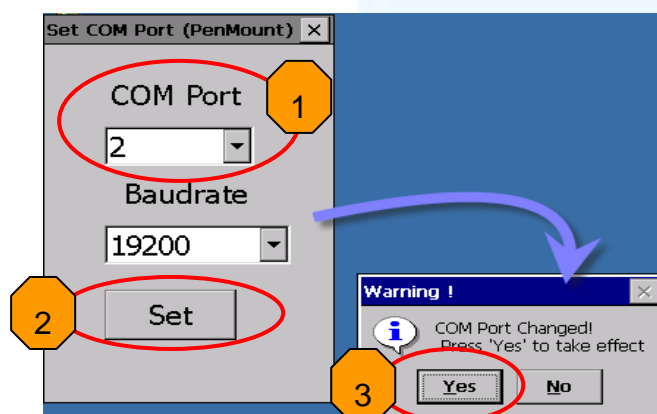

Simulating Right Mouse Button

For details of how to configure right mouse button simulation, please refer to the process describes in “Simulating the Right Mouse Button” in [Sec.2.1.1.2](#)


2.2.2.3. Uninstalling the XP-8000-CE6

The following procedure describes how to uninstall the PenMount serial touch driver.


1. From the “Start” menu, click “Settings”→”Control Panel”.



2. Double click the “Remove Programs” icon and select “ICPDAS Serial PenMount” from the “Programs” panel in the “Remove Programs” dialog box and then click the “Remove” button. When the warning pop-up, click “Yes” button to permanently uninstall the driver.

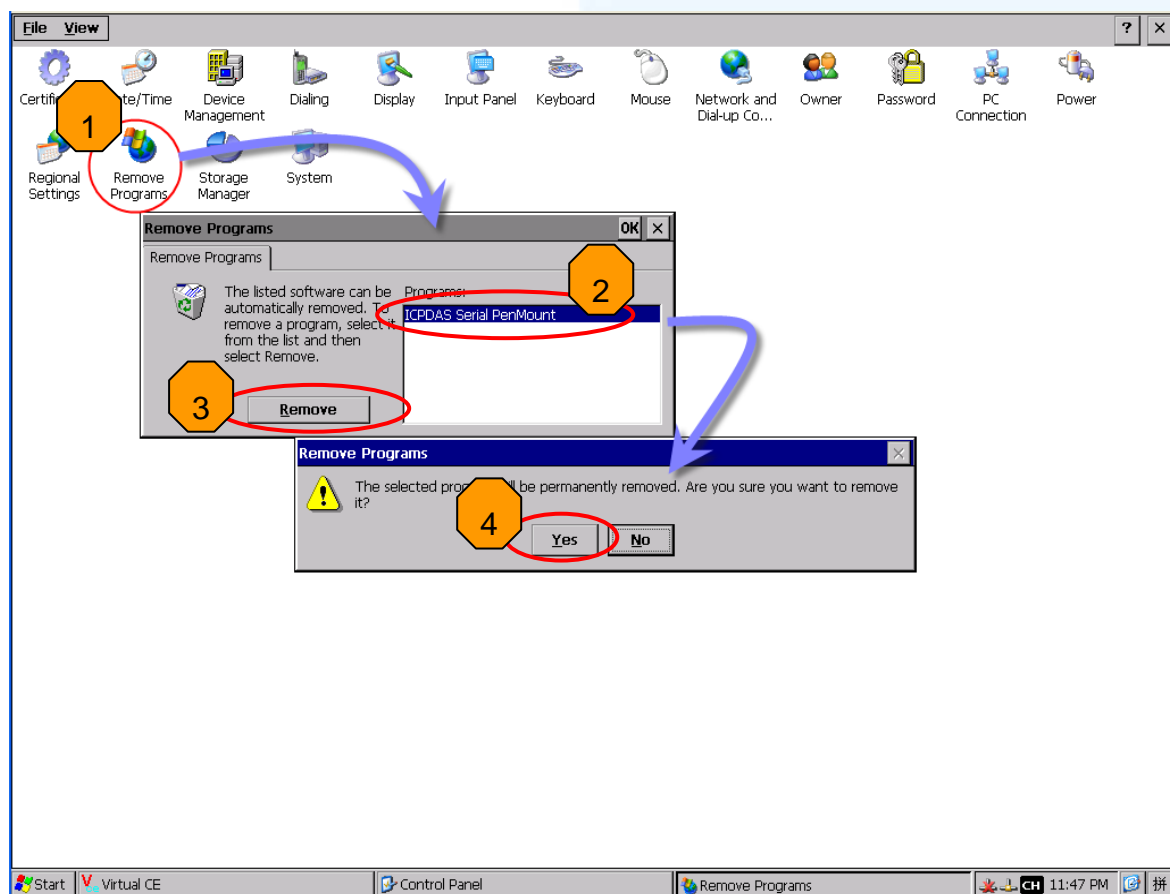

3. Once the uninstallation process is complete, a dialog will be displayed requesting that you reboot the system. Click the “Yes” button to reboot immediately or click the “No” button if you intend to reboot at a later.

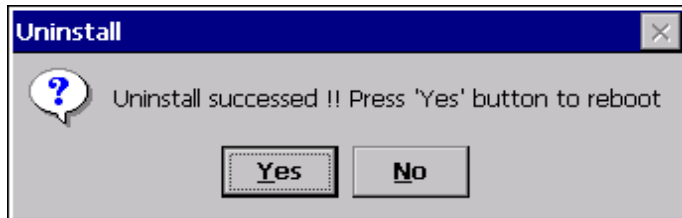

2.2.2.4. Other Windows CE 6.0 Device

The driver can be obtained from:

CD:\TPM-4100_TP-4100\Driver\WinCE\V6.0\Other CE6.0 device\

or go to the PenMount website to download the latest driver:

http://www.penmount.com/down_2_1.php



2.3. Windows XP Embedded

The touch driver for XP embedded is a universal driver. USB and Serial both use the same driver.

2.3.1. Universal Driver

Two universal touch drivers are available. The first is for XP-8000 series modules of ICPDAS PAC controller, and the second is for other Windows XP embedded system.

XP-8000 series:

1. Using ATOM CPU

XP-8141-Atom/XP-8341-Atom/XP-8741-Atom

2. Using LX800 CPU

XP-8041/XP-8341/XP-8741

2.3.1.1. Installation for XP-8000

The following procedure describes how to install the PenMount universal touch driver.

There is a **RS-232 cable in the shipping package** (Sec.1). The user can directly use this cable to **connect TPM-4100/TP-4100 with COM5 of XP-8000 to use universal touch driver to do a touch operation by serial way**. If the user wants to use other com port, please note the position of TX and RX of COM port. About the pin assignment, please refer to the user manual of the XP-8000.




1. Copy the driver from the CD-ROM to the XP-8000.

The "PenMount Windows Universal Driver Vx.x.x.x" folder can be obtained from:

CD: \TPM-4100_TP-4100\Driver\Win_XP_Embedded\XP-8000 device\


2. Executing XPAC Utility to disable EWF on desktop.

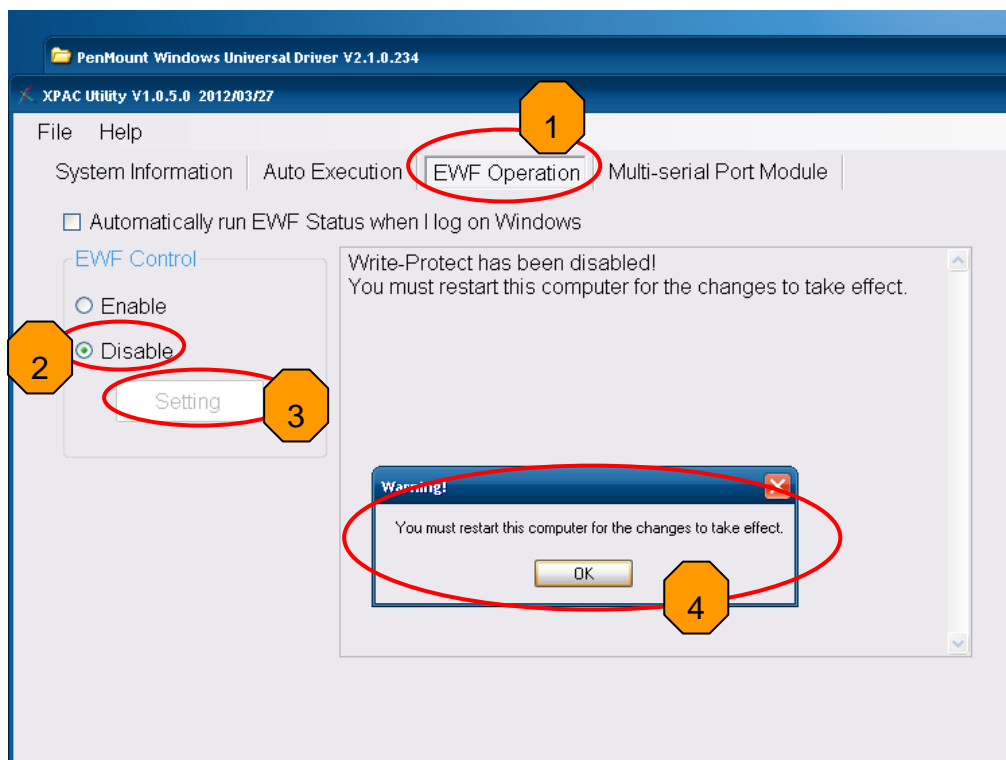


3. Double click Setup.exe in the driver's folder.




4. Click "Next" button to continue installation.

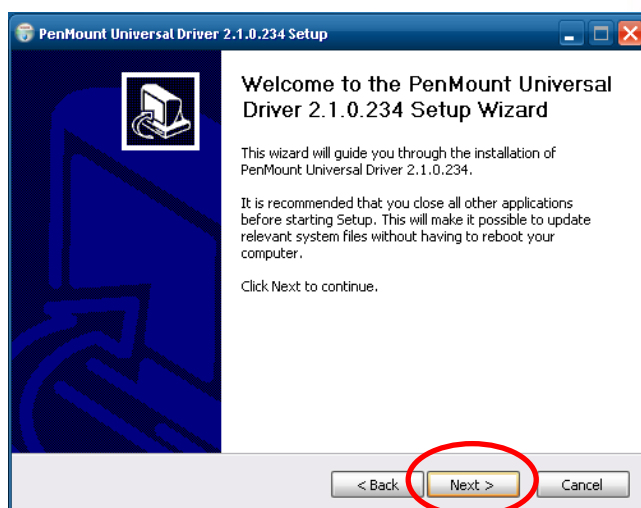


5. Click "I Agree" button.

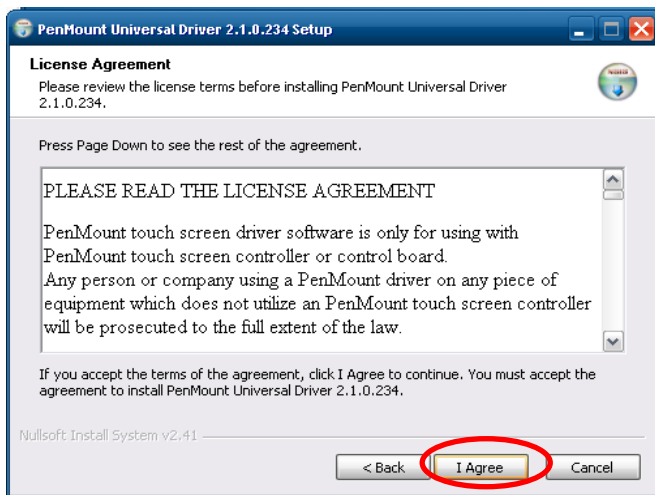

6. Click "Install" button to install driver to destination folder.

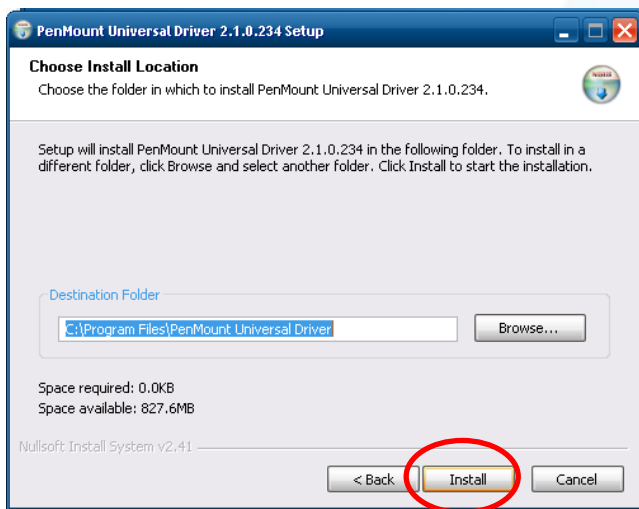


7. Click "Finish" button.

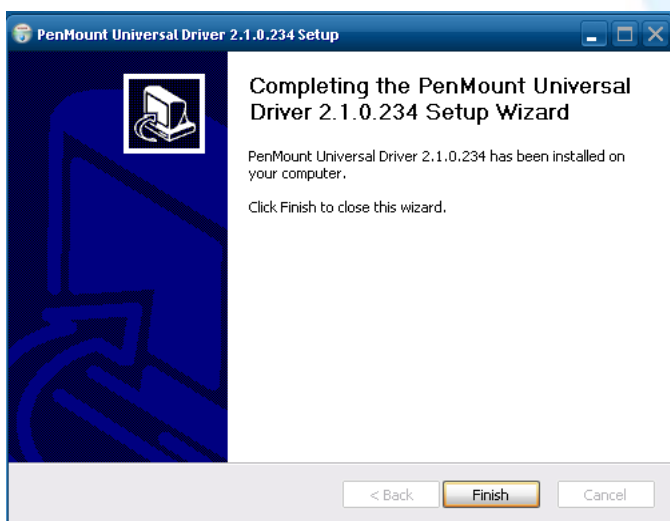


8. Restart XP-8000.
9. Connect USB or serial cable to XP-8000(USB and serial can not be used simultaneously).

If the USB or serial touch doesn't work, please follow the steps below.

- a. From the "Start" menu, click "Programs"→"PenMount Universal Driver"→"PenMount Control Panel".

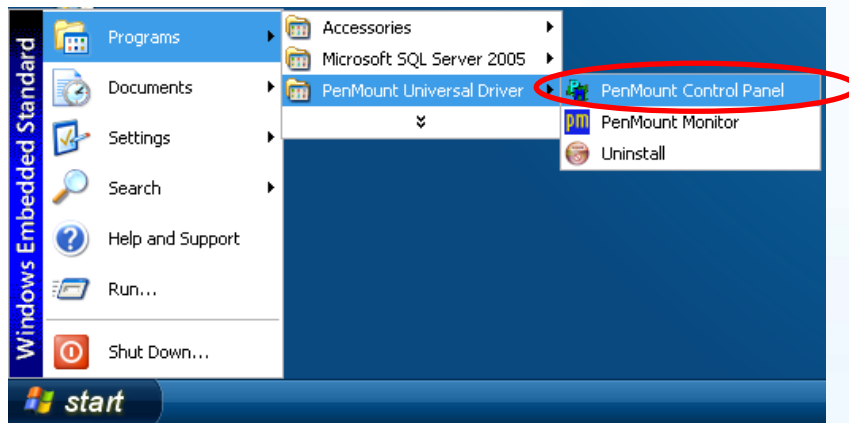


- b. "Device" tab→click "Refresh" button to search USB or serial touch screen monitor→ if search is successful, "PenMount 6000 USB" or "PenMount 6000 RS232" will show.

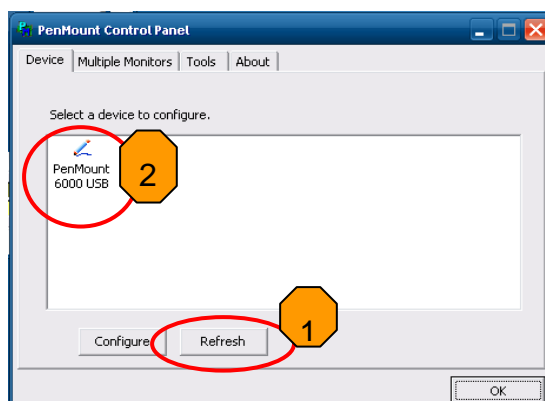


USB touch

Serial touch

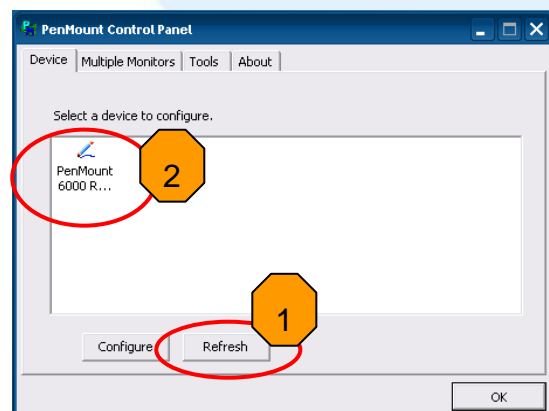

c. If search is successful, USB or serial touch driver has been installed.

10. Executing XPAC Utility to enable EWF on desktop.

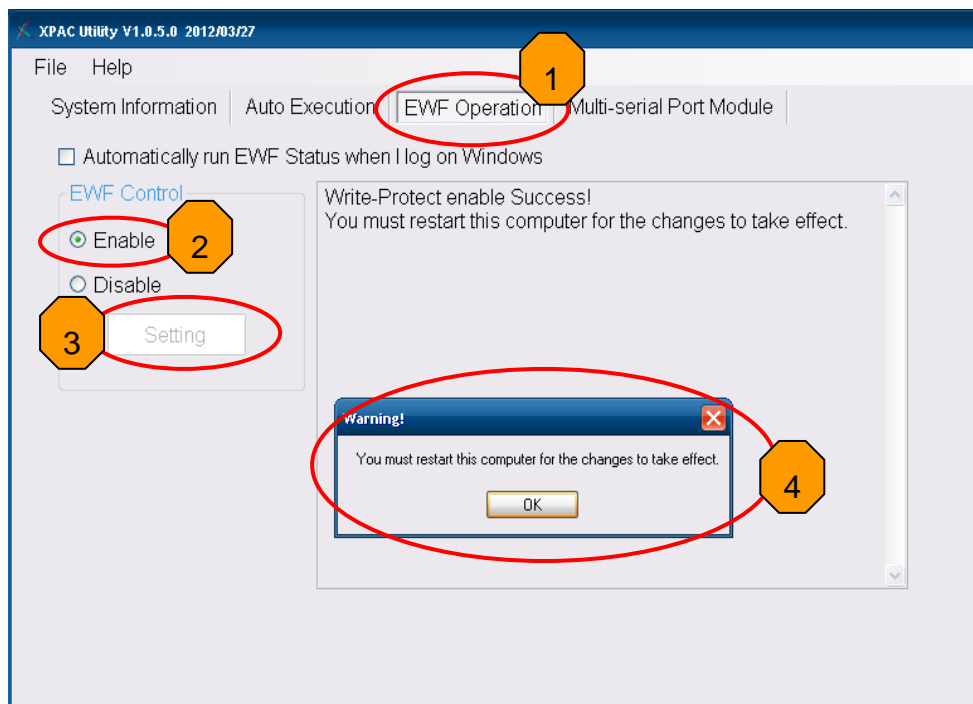


11. Restart XP-8000.


2.3.1.2. Configuration for XP-8000

Calibration

1. From the “Start” menu, click “Programs”→”PenMount Universal Driver”→”PenMount Control Panel”.

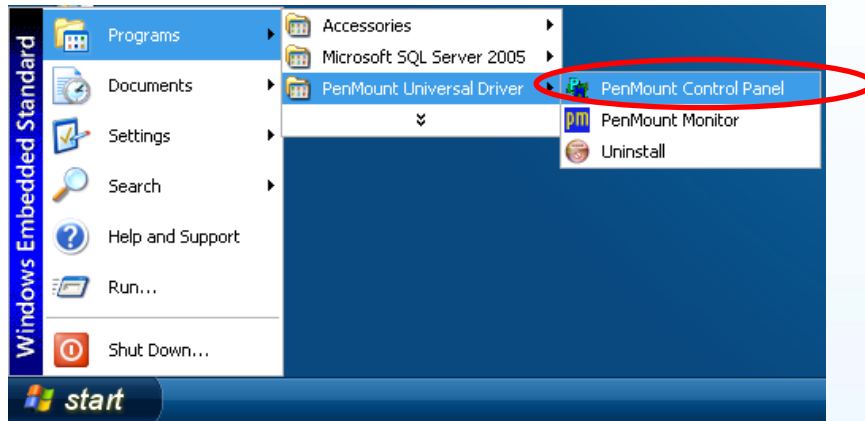


2. Check if the pattern “PenMount 6000 USB” or “PenMount 6000 RS232” shows. If yes, select a device and click “Configure” button. If no, refer to Sec.2.3.1.1.

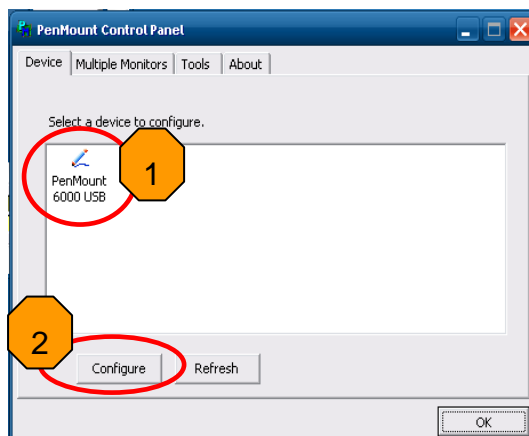


USB touch driver

Or

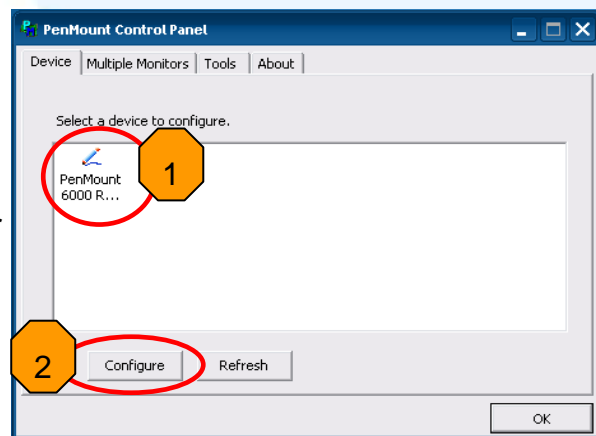


Serial touch driver


3. Click “Standard Calibration” to calibrate.

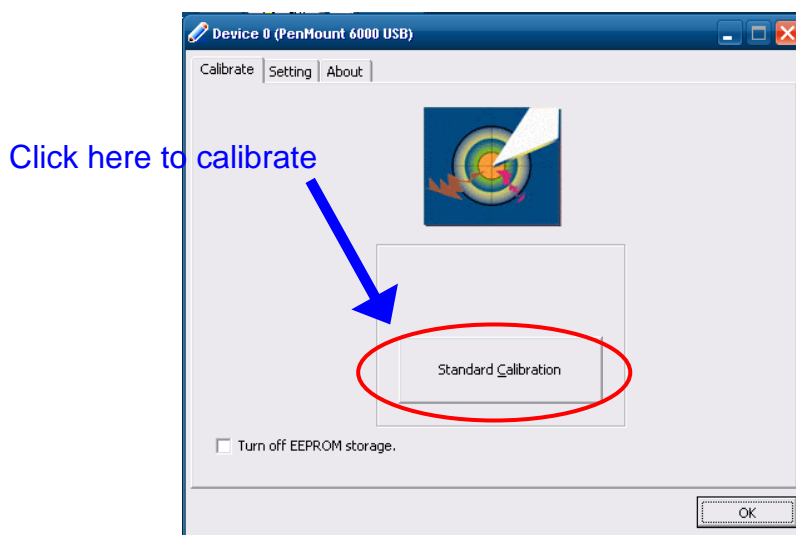

4. Executing XPAC Utility to disable EWF to save setting on desktop.

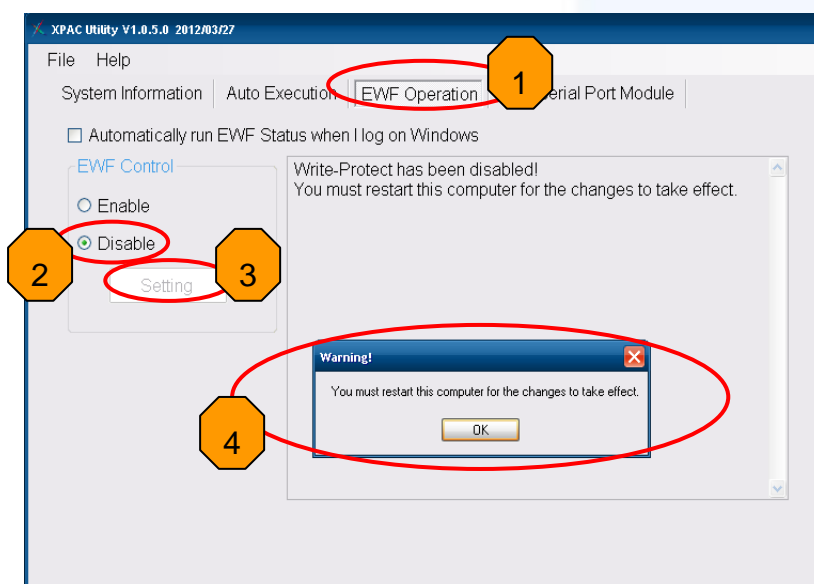

5. Restart XP-8000.
6. Executing XPAC Utility to enable EWF on desktop.

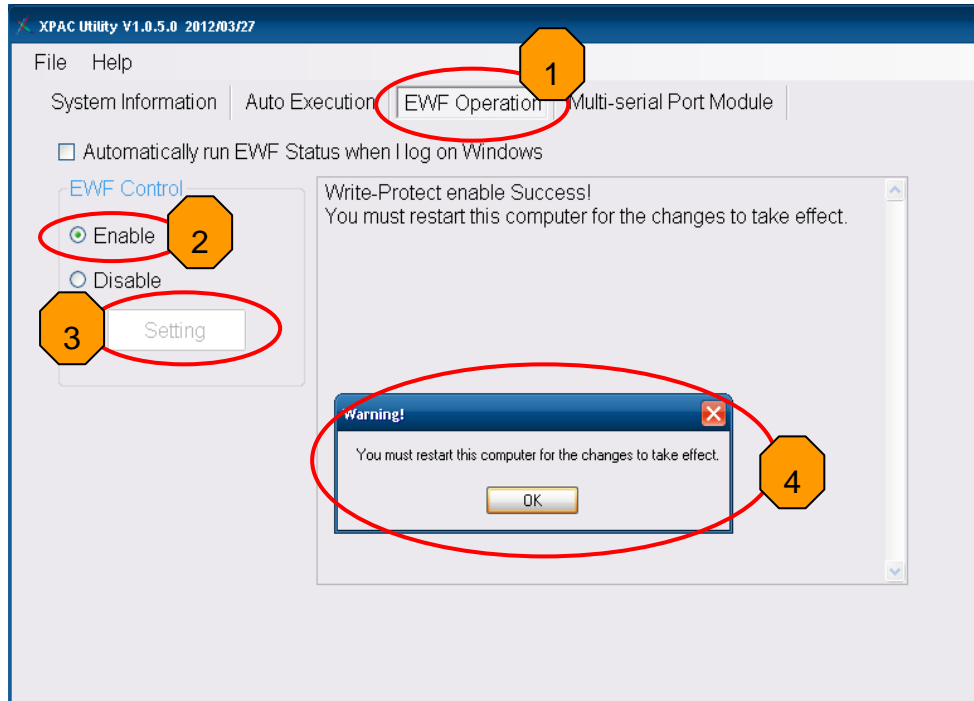

7. Restart to XP-8000 for the changes to take effect.

Change the COM Port


For serial touch driver

Method1: The touch driver will detect all com port to find what com port connects to serial touch screen monitor automatically when XP-8000 reboots every time.


Method2: Please refer to the Step 9 of Sec.2.3.1.1 to detect again.

Simulating Right Mouse Button

1. From the "Start" menu, click "Programs" → "PenMount Universal Driver" → "PenMount Control Panel".

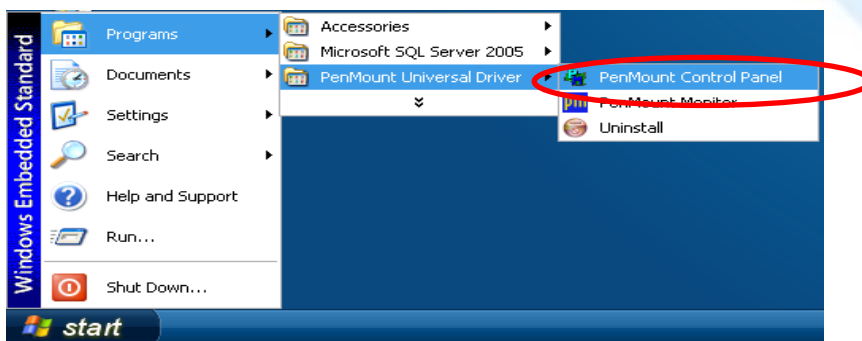


2. Click “Right Button Icon”

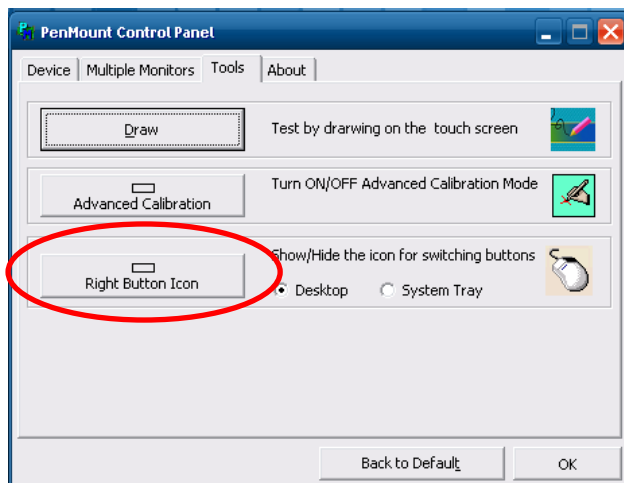

3. Show a screen below (Left picture)→ Click the “mouse” → Turn into right picture.



4. Click any object: Click “My computer” to test if the “Right Button Icon” function work. If the screen below shows, the “Right Button Icon” function works.

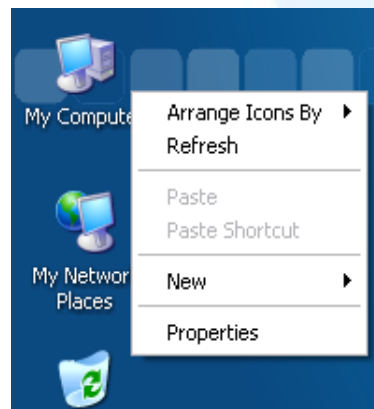


5. You can simulate the operation of right mouse button to repeat step3 and step4 for any object.


2.3.1.3. Uninstall for XP-8000

The following procedure describes how to uninstall the PenMount universal touch driver.


1. Executing XPAC Utility to disable EWF to start to save setting.

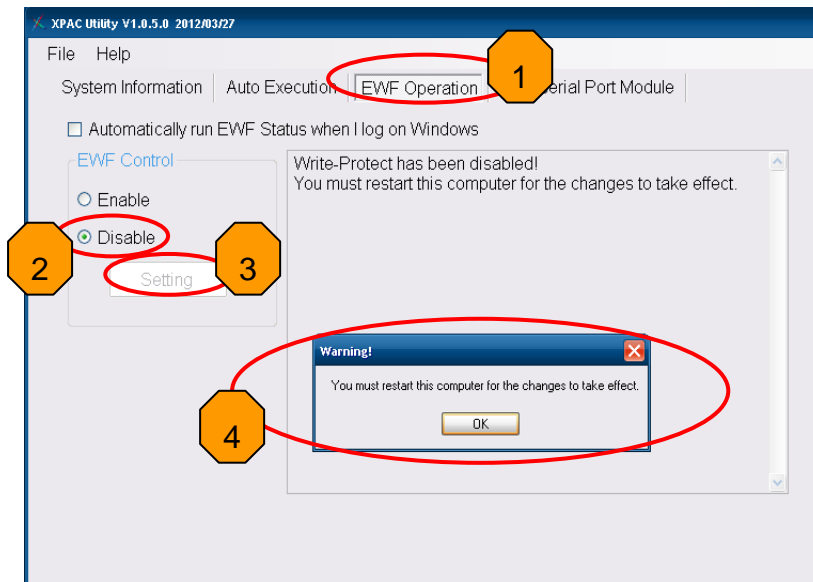


2. From the "Start" menu, click "Programs" → "PenMount Universal Driver" → "Uninstall".

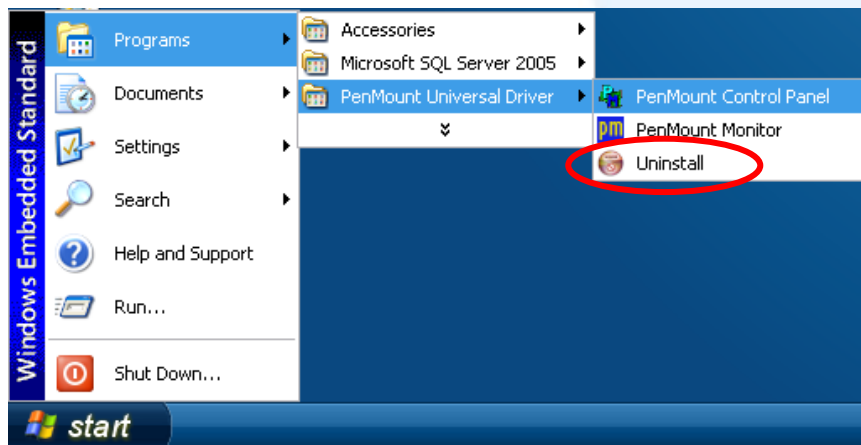


3. Click "Yes" button.

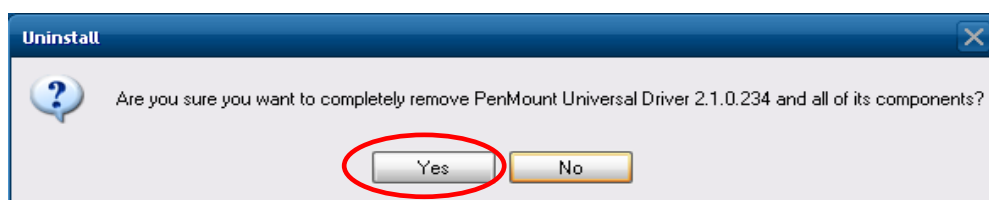

4. Click "Yes" button to reboot.

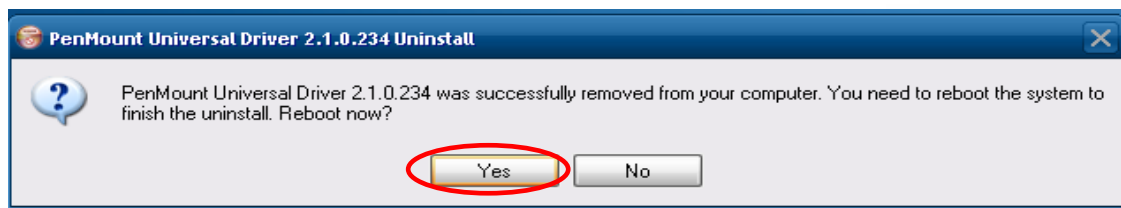

5. After reboot, executing XPAC Utility to enable EWF on desktop.

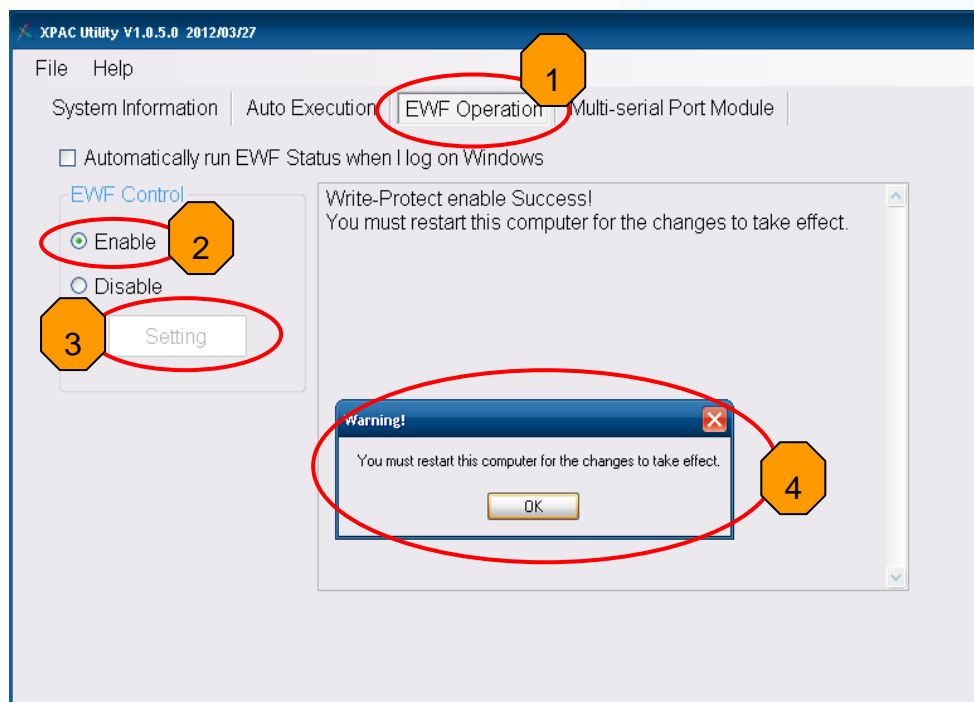

6. Restart XP-8000.

2.3.1.4. Other Windows XP Embedded Devices

The driver can be obtained from:

CD: \TPM-4100_TP-4100\Driver\Win_XP_Embedded\Other XP Embedded device\

or go to the PenMount website to download the latest driver:

http://www.penmount.com/down_2_1.php



2.4. Windows XP/7

The touch driver for 2k/XP/2003/2008/Vista/7 is a universal driver. USB and Serial both use the same driver.

2.4.1. Universal Driver

This section describes how to install, calibrate and uninstall the universal driver for 2k/XP/2003/2008/Vista/7.

2.4.1.1. Installation


The following procedure describes how to install the PenMount universal touch driver.

1. Copy the driver from the CD-ROM to your device.


The touch driver can be obtained from:

CD:\TPM-4100_TP-4100\Driver\Win_XP_7\


2. Connect USB or serial cable to your device (USB and serial can not be used simultaneously).
3. Executing Setup.exe.
4. Click "Next" button to continue installation.

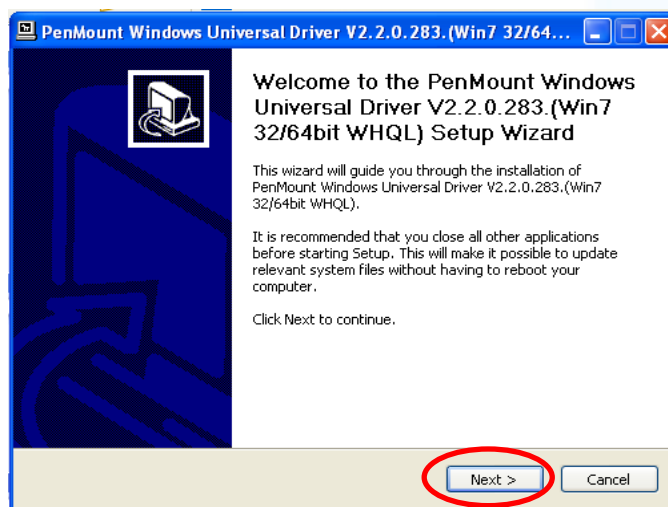


5. Click "I Agree" button.

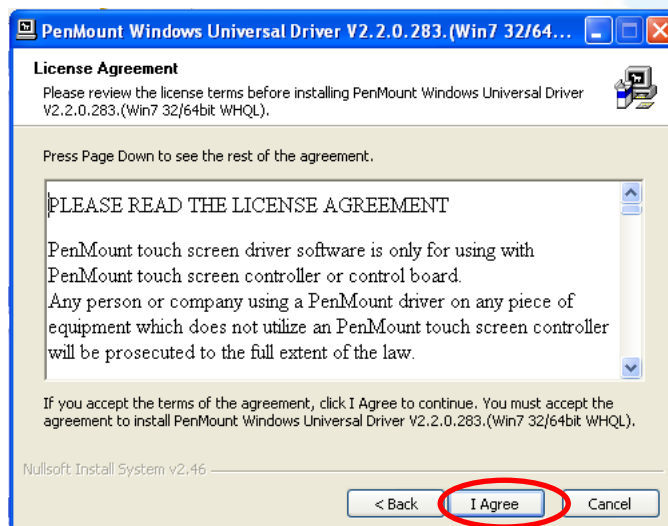

6. Click "Install" button to install driver.

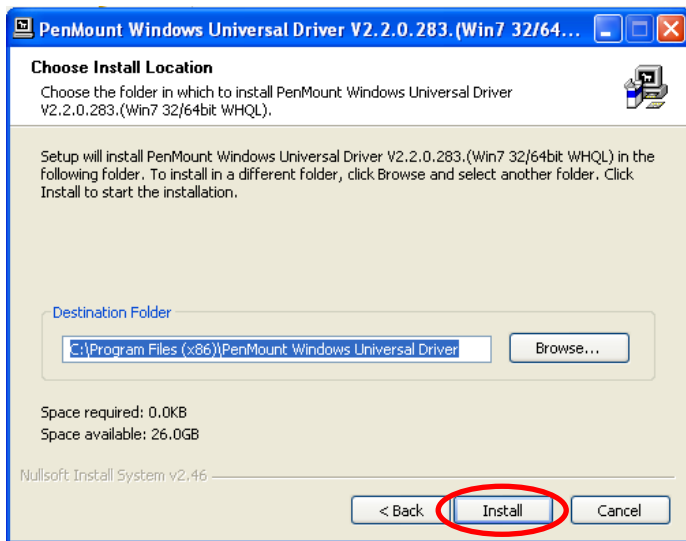

7. Click "Finish" to finish installation.

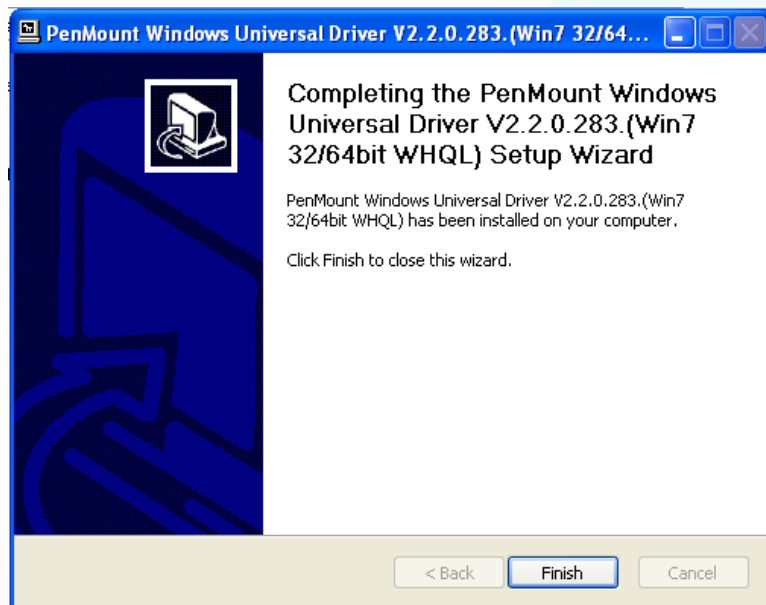


Tips & Warnings




When the system first detects TPM-4100/TP-4100, a screen appears that shows "Unknown Device". Do not use this hardware wizard. Press Cancel.




8. If the USB or serial touch doesn't work, following the steps below:
- From the "Start" menu, click "All Programs"→"PenMount Windows Universal Driver"→"Utility"→"PenMount Control Panel".

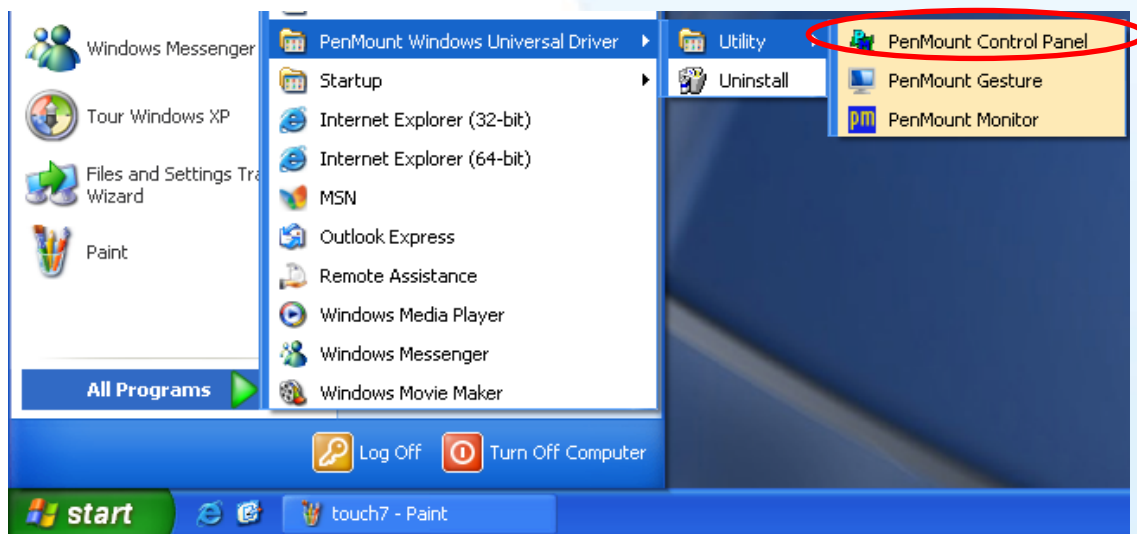

- "Device" tab→click "Refresh" button to search USB or serial touch screen monitor→ if search is successful, "PenMount 6000 USB" or "PenMount 6000 RS232" will show.

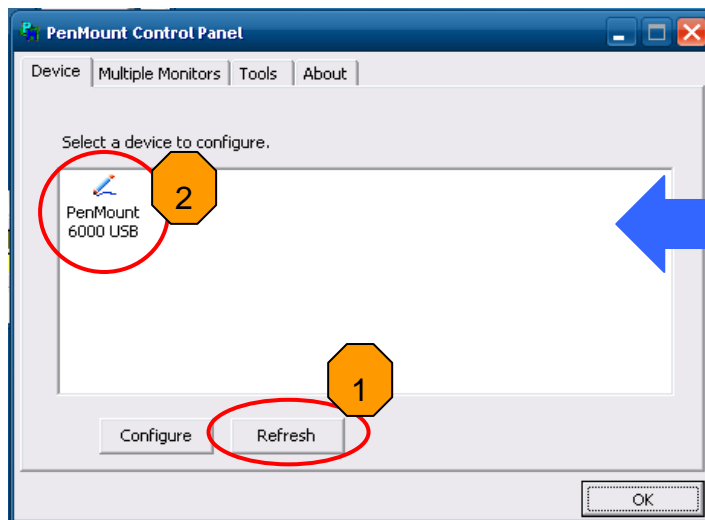

Serial touch

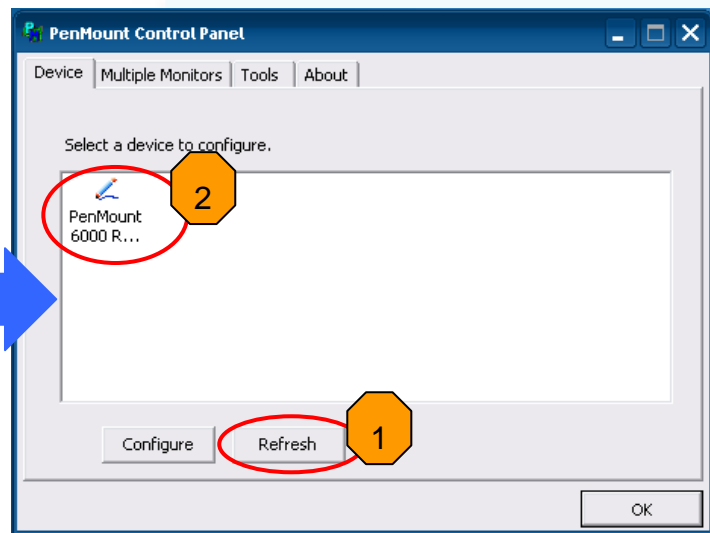


- c. If search is successful, the USB or serial touch driver has been installed.


2.4.1.2. Configuring

Calibration

1. From the “Start” menu, click “All Programs”→”PenMount Windows Universal Driver”→”Utility”→”PenMount Control Panel”.

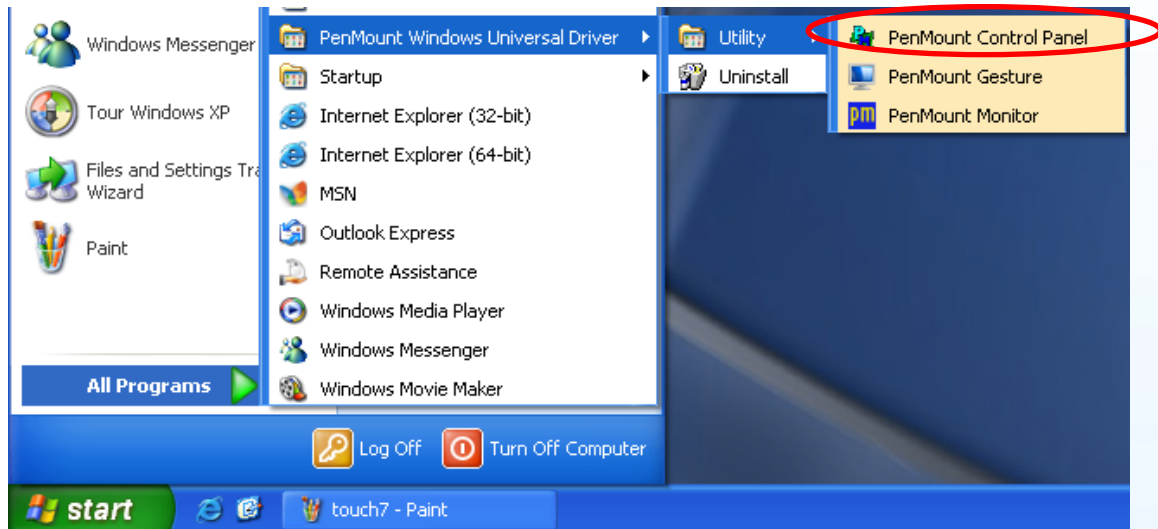


2. Check if the pattern "PenMount 6000 USB" or "PenMount 6000 RS232" shows. If yes, select a device and click "Configure" button. If no, refer to Sec.2.4.1.1.

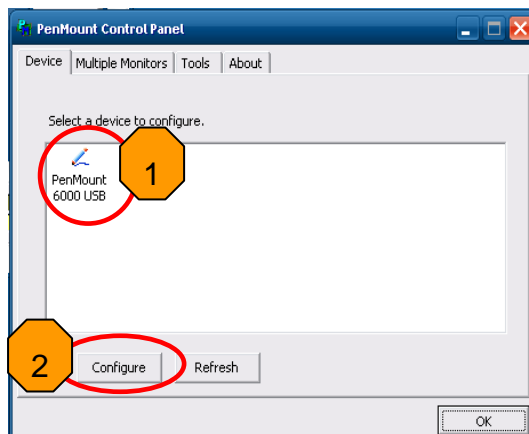


USB touch driver

Or

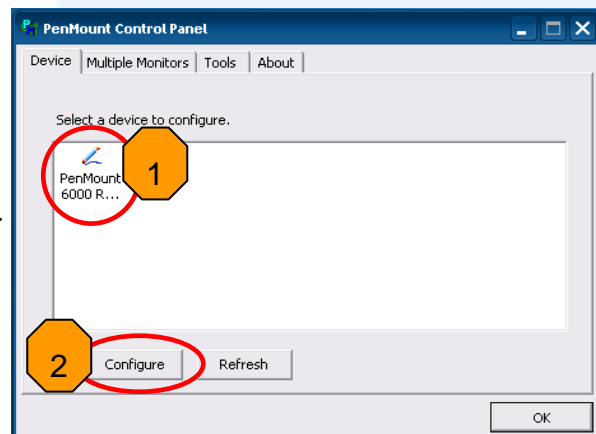

Serial touch driver

3. Click “Standard Calibration” to calibrate.

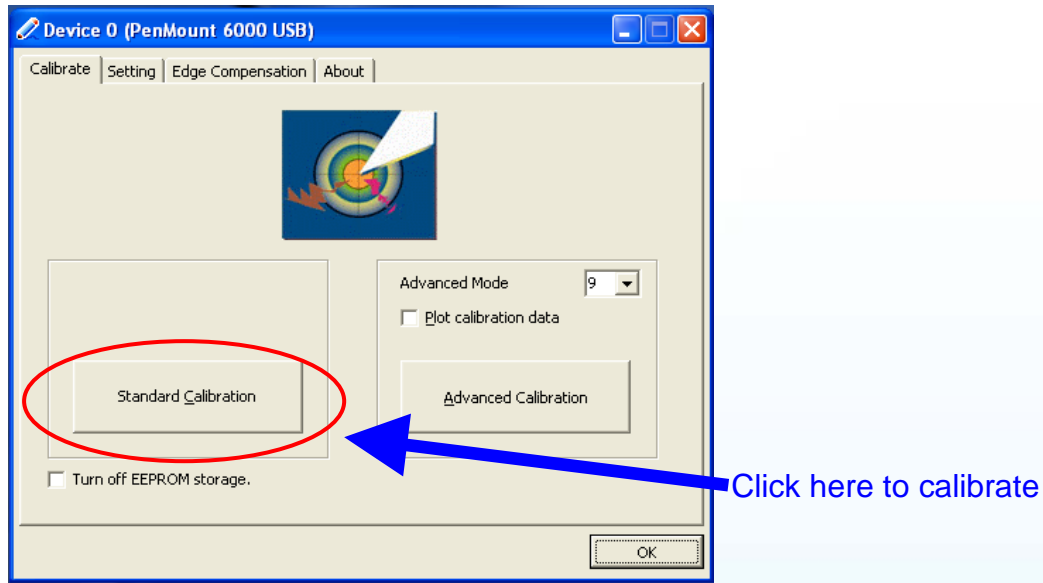

Change the COM Port

For serial touch driver

Method1: The touch driver will detect all com port to find what com port connects to serial touch screen monitor automatically when PC reboots every time.

Method2: Please refer to the Step 8 of Sec.2.4.1.1 to detect again.


Simulating Right Mouse Button

For details of how to configure right mouse button simulation, please refer to the process describes in “Simulating the Right Mouse Button” in [Sec.2.3.1.2](#).


2.4.1.3. Uninstall

The following procedure describes how to uninstall the PenMount universal touch driver.


1. **XP:** Start→All Programs→PenMount Windows Universal Driver→Uninstall.
Win7: Control Panel→Programs→Programs and Features

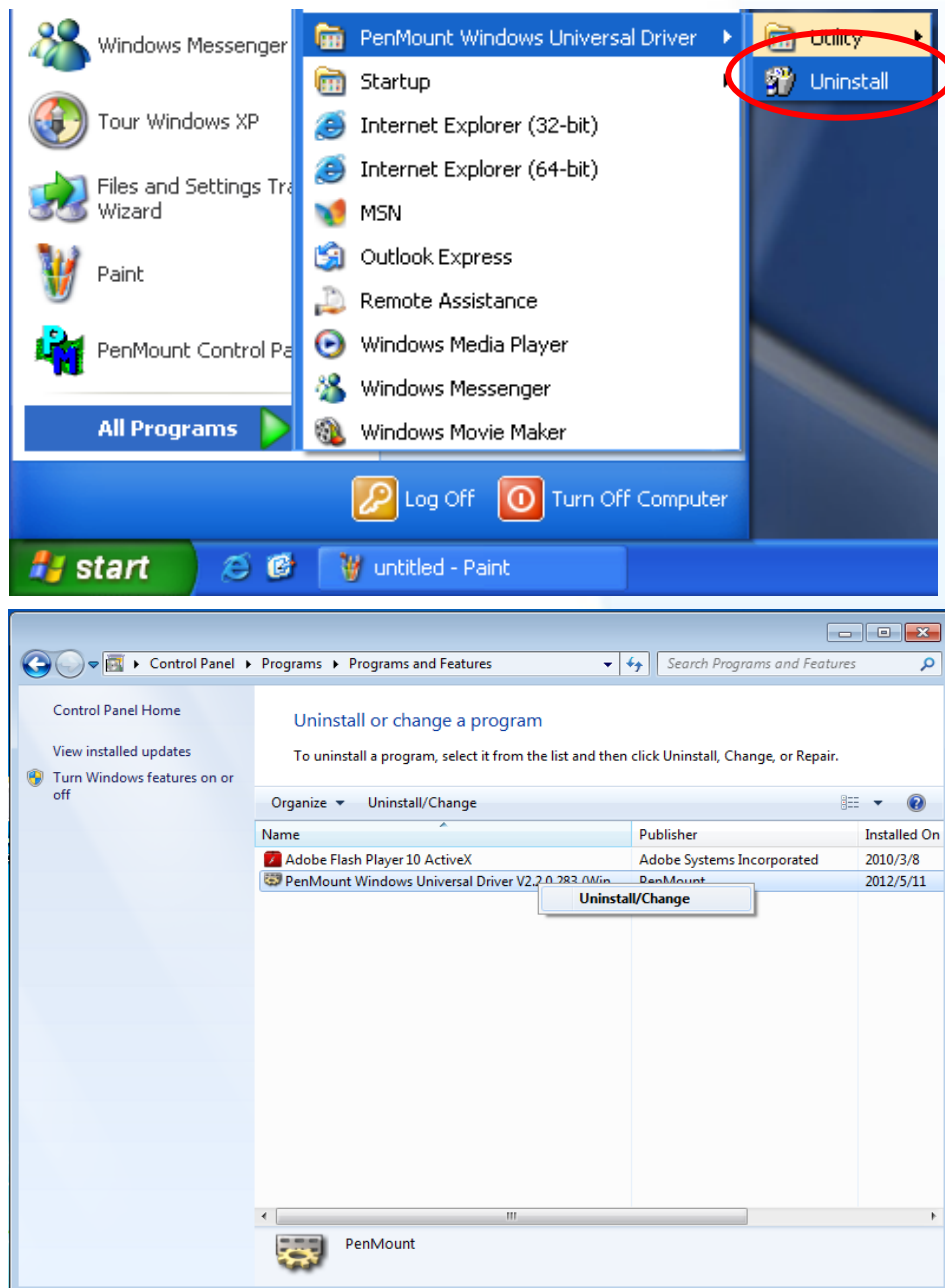

2. Click "Next" button.

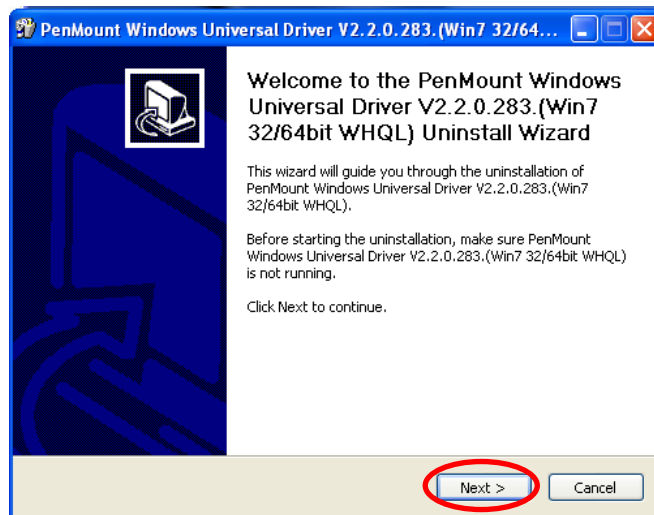

3. Click "Uninstall" button.

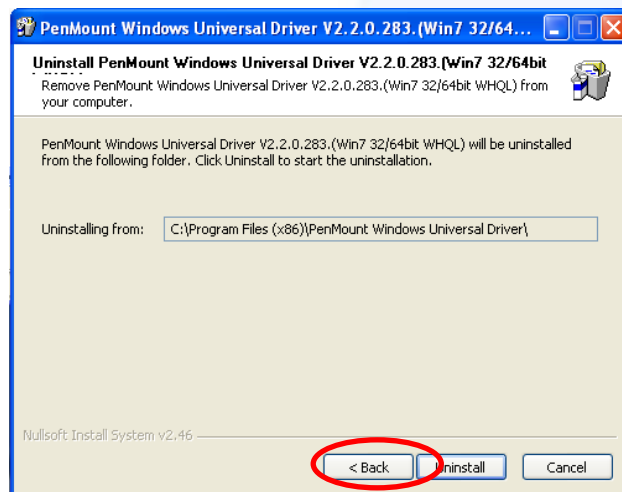

4. Click "Finish" button to reboot.

